


LY Series

Installation & Maintenance
for LY 1001, LY 2001, & LY 3001


150-12000
Rev A/www A
December 1998

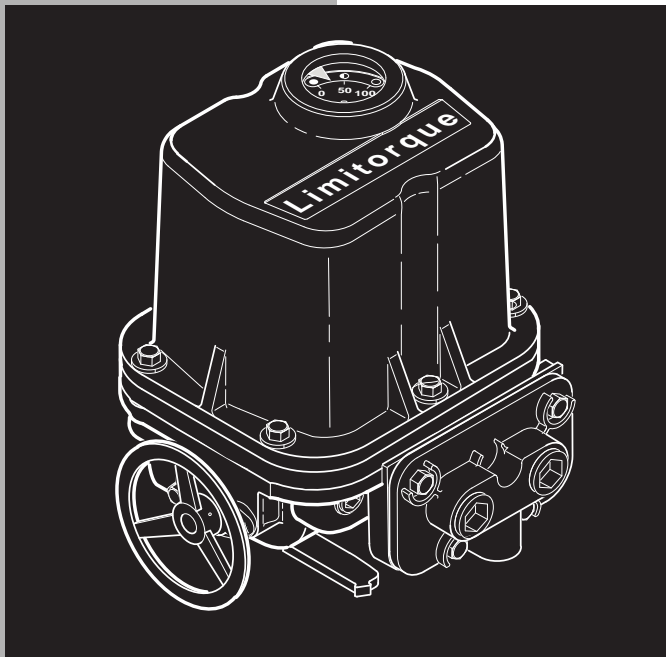

Limitorque

LY Series

Installation & Maintenance
for LY 1001, LY 2001, & LY 3001

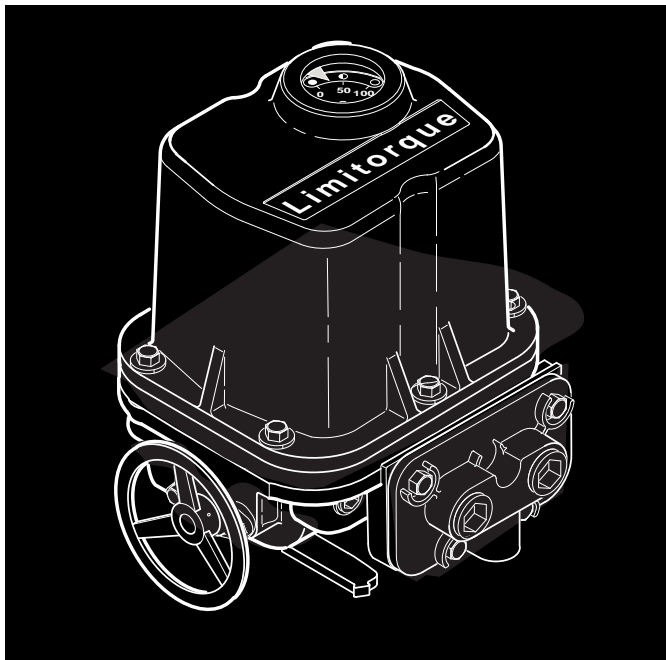

Limitorque

LY Series Installation & Maintenance Manual for LY 1001, LY 2001, & LY 3001

©1998 Copyright Limatorque Corporation. All rights reserved.

Printed in the United States of America.

Disclaimer

No part of this book shall be reproduced, stored in a retrieval system, or transmitted by any means, electronic, mechanical, photocopying, recording, or otherwise without the written permission of Limatorque. While every precaution has been taken in the preparation of this book, the publisher assumes no responsibility for errors or omissions. Neither is any liability assumed for damages resulting from the use of the information contained herein.

This document is proprietary information of Limatorque Corporation furnished for customer use ONLY. No other uses are authorized without written permission from Limatorque Corporation.

Limatorque Corporation reserves the right to make changes, without notice, to this document and the products it describes. Limatorque Corporation shall not be liable for technical or editorial errors or omissions made herein; nor for incidental or consequential damages resulting from the furnishing, performance or use of this document.

The choice of system components is the responsibility of the buyer, and how they are used cannot be the liability of Limatorque Corporation. However, Limatorque's sales team and application engineers are always available to assist you in making your decision.

This manual contains information that is correct to the best of Limatorque's knowledge. It is intended to be a guide and should not be considered as a sole source of technical instruction, replacing good technical judgment, since all possible situations cannot be anticipated. If there is any doubt as to exact installation, configuration, and/or use, call Limatorque Corporation at (804) 528-4400. The latest revisions to this document are available online at <http://www.limatorque.com>

Table of Contents

Introduction	1
Purpose	1
User Safety	1
Product Capabilities and Features	2
Initial Inspection and Storage Instructions	3
Product Identification	3
Inspection and Recording	3
Storage Procedures	3
Short-Term Storage (less than 1 year)	3
Long-Term Storage (1 to 5 years)	4
Unit Weights	5
Installation and Instructions	5
Safety Precautions	5
Initial Actuator Preparation	5
Installation Overview	6
Torque Switch Settings	10
Re-wiring the Torque Switch for Non-Standard Drive Sleeve Rotation	10
Limit Switch and Mechanical Stop Settings	11
Setting the Limit Switches	11
Setting the CLOSED Limit Switch	12
Setting the OPEN Limit Switch	13
Mechanical Stops	14
Setting the CLOSED Mechanical Stop on the LY 1001	14
Setting the CLOSED Mechanical Stop on the LY 2001/3001	15
Setting the OPEN Mechanical Stop on the LY 1001	16
Setting the OPEN Mechanical Stop on the LY 2001/3001	16
Setting the MDPI (Mechanical Dial Position Indicator)	17
Setting the Potentiometer	18
Operation	19
Typical LY 1001 Operation	19
Verify Correct Motor Rotation (Phasing) and OPEN/CLOSE Pushbutton operation	19
Three-phase Motor	19
Single-phase Motor	22
DC Motor	25
Electrical Start-up	25
Manual Operation	25
Motor Operation	26
Maintenance	34
Lubrication	34
Lubrication Inspection	34
Factory Lubricant	34
Minimum Lubricant Qualities Required	34
Disassemble and Reassemble	35

Disassemble Unit LY 1001	35
Reassemble Unit LY 1001	37
Disassemble Unit LY 2001/3001	39
Reassemble Unit LY 2001/3001	40
Troubleshooting	43

Parts	46
Parts List	46
LY 1001 Parts List	46
LY 2001/3001 Parts List	47
How to Order Parts	50

Figures

Figure 1 – LY actuator	2
Figure 2 – LY nameplate	3
Figure 3 – Torque Nut and Retaining Drive Ring removal from an LY 1001	5
Figure 4 – LY Keyway locations	6
Figure 5 – LY 1001, 2001, and 3001 Torque Drive Nut orientation	7
Figure 6 – Removing control cover and conduit pipe plugs	8
Figure 7 – Grounding Lug location	9
Figure 8 – Reversing Torque Switch wiring	11
Figure 9 – Limit Switch Setting Nut	12
Figure 10 – Setting CLOSE limit cam	13
Figure 11 – Setting OPEN limit cam	14
Figure 12 – Mechanical Stop Set Screw adjusted to Torque Drive Nut contact point on LY 1001	15
Figure 13 – Mechanical Stop Set Screw adjusted to Torque Drive Nut contact point on LY 2001/3001	16
Figure 14 – Aligning MDPI with dial window retaining plate	17
Figure 15 – Potentiometer calibration components	18
Figure 16 – Standard actuator/three-phase	20
Figure 17 – Three-phase with control package	21
Figure 18 – Standard actuator/single-phase	23
Figure 19 – Single-phase with control package	24
Figure 20 – Cover and associated parts	27
Figure 21 – Top plate and associated parts	28
Figure 22 – Housing and associated parts	29
Figure 23 – Cover and associated parts	30
Figure 24 – Top plate and associated parts	31
Figure 25 – Housing and associated parts	32
Figure 26 – LY 3001 handwheel assembly	33
Figure 27 – LY 1001 declutch return spring installation position	37
Figure 28 – LY 2001/3001 declutch return spring installation position	41

Tables

Table 1 – Unit weights	5
Table 2 – Torque Drive Nut custom bore and keyway sizes	6
Table 3 – LY mounting tap sizes	8
Table 4 – Control Cover and Conduit Pipe Plug hardware	9
Table 5 – LY Cover Bolt Torque Settings for submersible actuator	9
Table 6 – Mechanical Stop Set Screws	14
Table 7 – Mechanical Stop and Lock Nut Screw sizes	15

Introduction

Purpose

This Installation and Maintenance Manual explains how to install and maintain LY actuators. Information on installation, disassembly, lubrication, and parts information is provided.

User Safety

Safety notices in this manual detail precautions the user must take to reduce the risk of personal injury and damage to the equipment. The user must read and be familiar with these instructions before attempting installation, operation, or maintenance. Failure to observe these precautions could result in serious bodily injury, damage to the equipment, warranty void, or operational difficulty.

Safety notices are presented in this manual in three forms:

▲ DANGER: Refers to personal safety. Alerts the user to danger or harm. The hazard or unsafe practice *will* result in severe injury or death.

▲ WARNING: Refers to personal safety. Alerts the user of potential danger. Failure to follow warning notices could result in personal injury or death.

CAUTION: Directs the user's attention to general precautions that if not followed could result in personal injury and/or equipment damage.

NOTE: Highlights information critical to the user's understanding of the actuator's installation and operation.


Product Capabilities and Features

The LY actuator controls the opening and closing travel of the valve and limits torque through the torque switches provided. As a result, all valve-operating parts are protected from overload, improper seating and foreign obstructions.

LY actuators may be mounted on any size valve in almost any position or location.

Microprocessor-based control and monitoring devices are available for installation on your actuator. Contact your local Limitorque distributor or Limitorque sales office for further information.

Figure 1 – LY Actuator (LY 1001 shown)

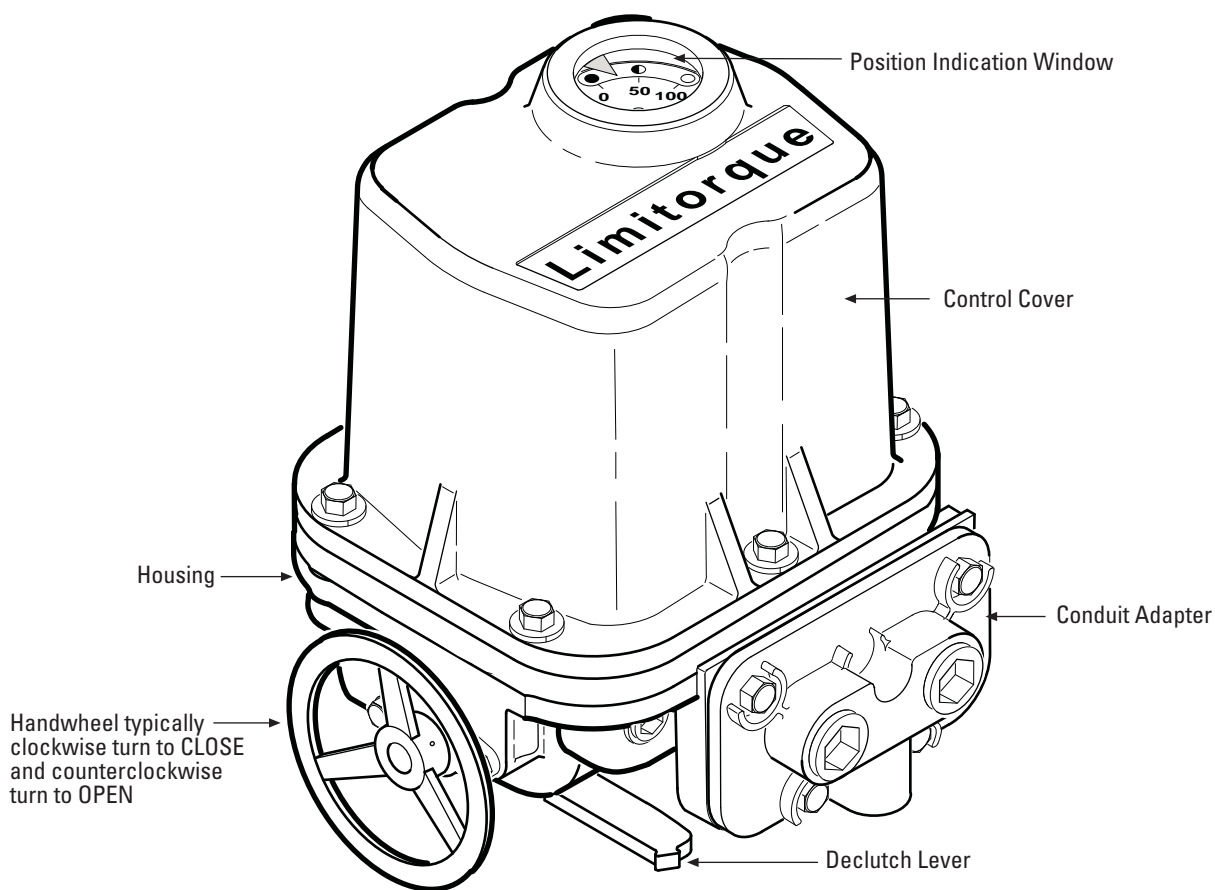

Initial Inspection and Storage Instructions


▲ WARNING: Read this Installation and Maintenance Manual carefully and completely before attempting to store the actuator. Be aware of electrical hazards within the actuator and high-pressure hazards of the attached valve or other actuated device when installing or performing maintenance on your LY actuator.

Product Identification

The actuator unit nameplate is located on the back of the unit opposite the limit switch compartment. The nameplate contains the following information:

- Limitorque name
- Point of Manufacture
- Unit Size
- Serial Number
- Order Number
- Electrical Power Supply
- Operating Time (seconds)
- Motor Full Load Amperage

Figure 2 – LY Nameplate

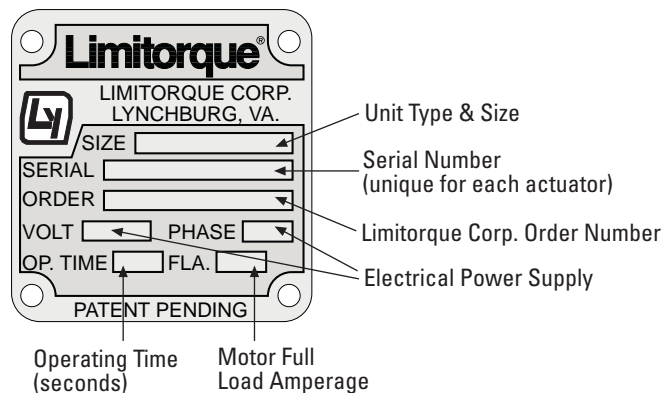

Inspection and Recording

Upon receipt of the actuator, inspect the condition of the equipment and record nameplate information as follows:

1. Carefully remove actuator from shipping carton or skid. Thoroughly examine the equipment for any physical damage that may have occurred during shipment. If damaged, immediately report the damage to the transport company.
2. Record the unit nameplate information for future reference, i.e., ordering parts, obtaining further information.

Storage Procedures

NOTE: The following are Limitorque's recommended storage procedures to retain maximum product integrity during short-term and long-term storage. Failure to comply with recommended procedures will void the warranty.

Short-Term Storage (less than 1 year)

Actuators should be stored in a clean, dry, protected warehouse free from excessive vibration and rapid temperature changes.

Preparation

1. Connect internal heaters if supplied.
2. Replace all plastic caps or plugs with pipe plugs.
3. Ensure all covers are tight.
4. If mounted on a valve and the stem protrudes from the unit, install a suitable stem cover.

Outdoor Storage

If actuators must be stored outdoors, they should be stored off the ground, high enough to prevent being immersed in water or buried in snow.

LY Storage Orientation

Store with the Control Compartment Cover (Limit Switch compartment) facing upward. Do not store units on their side.

Long-Term Storage (1 to 5 years)

Actuators should be stored in a clean, dry, protected warehouse free from excessive vibration and rapid temperature changes.

NOTE: During long-term storage, the maximum source of equipment deterioration anticipated is from possible condensation within the actuator enclosure. This condensation may occur with rapid temperature changes in the storage environment. If reliable means are not available to prevent rapid temperature changes, a heat source should be added in the electrical enclosure during storage. Consult the Limitorque Service Department for further information.

LY Storage Orientation

1. Store with the Control Compartment Cover (Limit Switch compartment) facing upward. Do not store units on their side.
2. Store off the floor on suitable skids and cover with an unsealed dust cover leaving the bottom open and air holes in the side.

Storage Inspection and Correction

1. Perform a semi-annual visual inspection. A minimum inspection should include checking the following:
 - Packaging
 - Plugs
 - Covers
 - Dryness
 - Cleanliness
 - Heat source (if used) for proper functioning
2. Record and correct deficiencies noted during inspection.

Unit Weights

The approximate LY actuator weights are provided below.

Table 1 – Unit weights

Unit Size	Control	(lbs)	(Kg)
LY 1001	NCU	40	20
	BIC	75	34
	UEC	90	41
LY 2001	NCU	100	45
	BIC	110	50
	UEC	144	65
LY 3001	NCU	105	48
	BIC	130	59
	UEC	149	68

Installation Instructions

Safety Precautions


▲ WARNING: Read this Installation and Maintenance Manual carefully and completely before attempting to install, operate, or troubleshoot the Limatorque LY actuator.

Initial Actuator Preparation

Piece numbers refer to Figure 3.

1. Remove the **Retaining Drive Ring** (piece #165 or #109) and **Torque Nut** (piece #32) from actuator.

Figure 3 – Torque Nut and Retaining Drive Ring removal

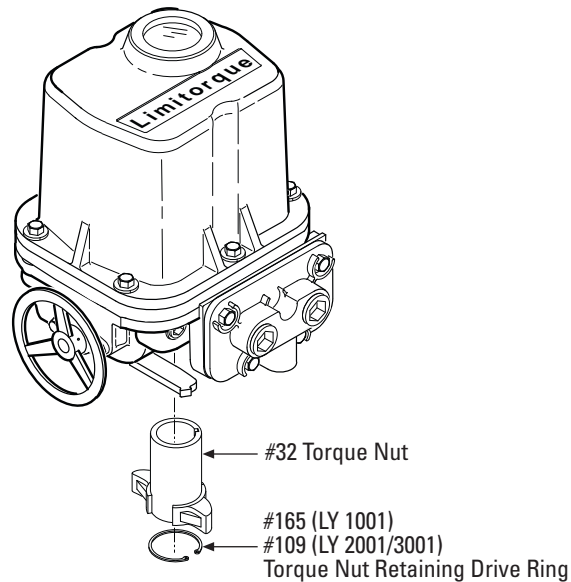

2. If Torque Nut has been bored and keywayed by Limitorque, verify dimensions and keyway location for proper compatibility with the valve stem.
3. If Torque Nut has not been bored and keywayed by Limitorque, it is provided solid (blank) to allow customer to custom key and bore up to the maximum permissible sizes as listed in Table 2.

Table 2 – Torque Nut custom bore and keyway sizes

Unit Type & Size	Maximum Bore Inch (metric)	Maximum Keyway Inch (metric)
LY 1001	1 1/8 dia (28mm dia)	1/4 x 1/8 (6 x 3)
LY 2001/3001	2 3/8 dia (60mm dia)	5/8 x 5/16 (15 x 7.5)

NOTE: Before keywaying, match the Torque Nut with the Valve Stem to ensure proper keyway location. Use the Keyway Index Mark (LY 1001 only) for locating appropriate keyway location.

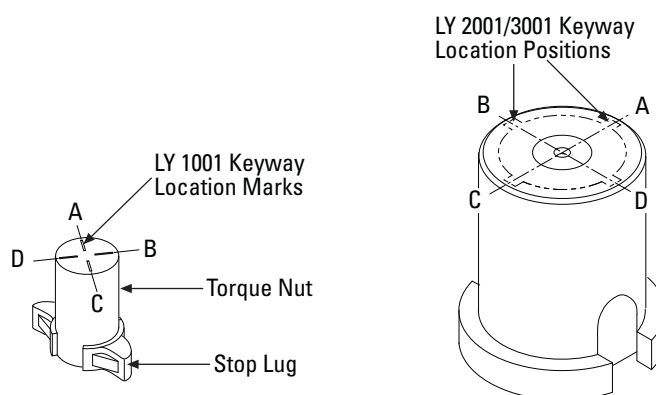



Figure 4 – LY Keyway Locations

Installation Overview

CAUTION: Be sure to complete each step of the installation overview before electrically operating your actuator. If the actuator is already mounted to a valve from the manufacturer, verify that the actuator is mounted according to the following overview. Failure to follow the installation procedures could result in personal injury and/or improper operation and could cause damage to the equipment.

1. Mount **Torque Nut** (piece #32) in the actuator as shown in Figure 5 with the following alignment:
 - A. For LY 1001 - **Stop Lugs** facing the **Actuator Mounting Adapter** with index lines positioned to face the **Mechanical Stop Screws**.
 - B. For LY 2001/3001 - **Torque Nut** axially aligned on the **Drive Sleeve** so that the bottom of the nut is positioned inside the **Actuator Mounting Base**.

Figure 5 - LY 1001, 2001 & 3001 Torque Nut Orientation

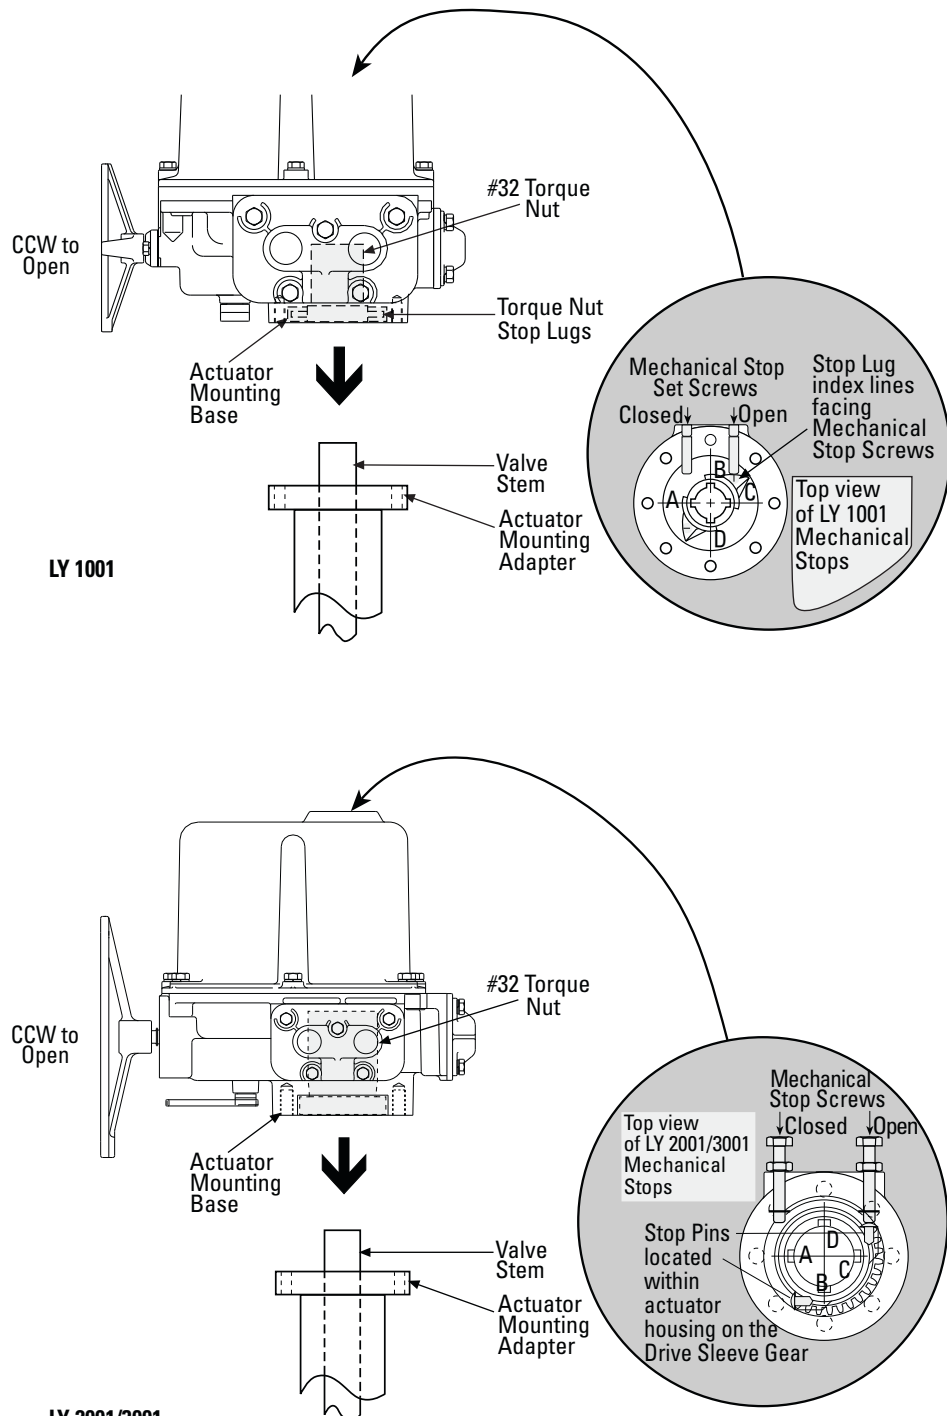

2. Insert the **Retaining Drive Ring** (piece #165 for LY 1001, piece #109 for LY 2001/3001) on the **Torque Nut** (piece #32) to hold the Torque Nut in place in the actuator.
3. Mount the LY actuator on the mounting flange of the valve or other actuated equipment. High strength (minimum SAE-Grade 5 120,000 P.S.I. tensile strength) hex head or socket head cap screws with lockwashers are recommended. The actuator mounting tap quantities and thread sizes are detailed in Table 3.

Table 3 – LY actuator/mounting base tap sizes

Unit Type & Size	Quantity	Tap Size	
		English	Metric
LY 1001	8	3/8-16 Tap x 0.71 Deep	M10 x 1.5mm x 25mm Deep (Complies with F10 ISO mounting flange criteria)
LY 2001/3001	8	5/8-11 Tap x 1.26 Deep	M16 x 2mm x 35mm Deep (Complies with F14 ISO mounting flange criteria)


NOTE: Limitorque has supplied 8 taps for the LY 1001, LY 2001, and LY 3001 in English/Metric units to provide flexibility in mounting arrangements. A minimum of 4 securing bolts is required to properly secure and retain torque reaction on these units.

▲ DANGER: HAZARDOUS VOLTAGE. No electrical power should be connected until all wiring and limit switch adjustments have been completed. Once power is supplied to unit, exercise caution if cover is not installed.

4. Remove the **Control Cover** (piece #3) and **Conduit Pipe Plugs** (piece #144).

Figure 6 – Removing Control Cover and Conduit Pipe Plugs

Table 4 – Control Cover and Conduit Pipe Plug hardware

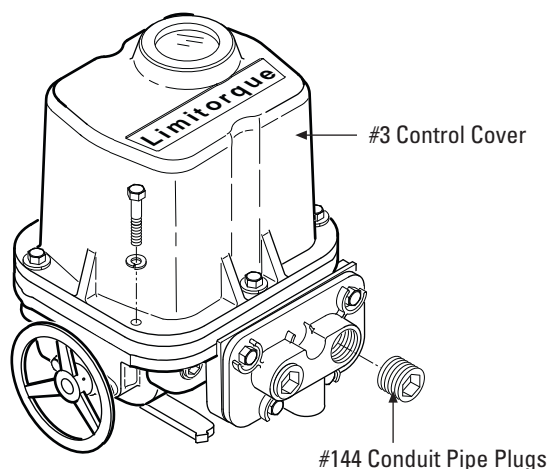


Unit Type	Control Cover		Conduit Pipe Plug	
	Quantity	Size	Quantity	Size
LY 1001 (WP & XP)	6	M8 x 40mm	2	1" NPT Socket Hex Head
LY 2001/3001	8	M12 x 50mm (WP) M12 x 55mm (XP)	2	1" NPT Socket Hex Head

5. Adjust the **Limit Switches, Mechanical Stops** and **Position Indication Dial** following the procedures detailed in **Section Limit Switch and Mechanical Stop Settings**.
6. Connect the wiring to the terminal strips provided on the actuator. Refer to the wiring diagram supplied with the actuator. "Fork-type" terminal connections are recommended.
7. Re-insert a **Conduit Pipe Plug** in the unused conduit entrance if the wiring that enters the actuator uses only one conduit entrance.

NOTE:

- A. Explosionproof actuators require approved "sealing fittings" installed in accordance with the National Electric Code.
 - B. Submersible actuators require an approved "sealing fitting" in order to eliminate water entering the actuator.
8. Attach grounding wire to **Grounding Lug** (piece #141).
 9. Verify motor rotation direction to ensure that the limit switch is wired properly for intended operation. (See **Section Verify Correct Motor Rotation (Phasing) and OPEN/CLOSE Pushbutton Operation.**)

Figure 7 - Grounding Lug location

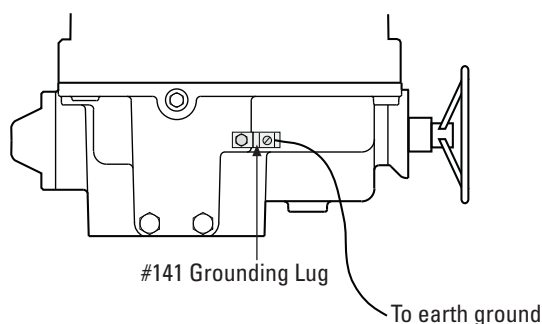

10. Re-install **Control Cover** (piece #3).
NOTE: Submersible actuators require tightening the Control Cover Bolts and Integral Control Cover Bolts to a specified foot-pound of torque in order to maintain submersibility. (See Table 5 for specific torque settings.)

Table 5 – LY Control Cover and Integral Control Cover Bolt Sizes

Unit Type	Control Cover	Integral Compartment
LY 1001	M8 = 10 to 15 ft. lbs.	M10 = 15 to 20 ft. lbs.
LY 2001/3001	M12 = 20 to 25 ft. lbs.	M10 = 15 to 20 ft. lbs.

Unit is now ready for electrical operation.

Torque Switch Settings

▲ DANGER: HAZARDOUS VOLTAGE. Turn power OFF before opening the Electrical Compartment Cover or making any adjustments to the Torque Switch.

CAUTION: Installing or adjusting the Torque Switch with the actuator in a loaded condition will result in loss of torque protection. Before adjusting or installing the Torque Switch, place the actuator in MANUAL mode and turn the Handwheel in the direction necessary to release the torque load on the Wormshaft Assembly.

NOTE: Removal or modification of the Torque Switch Limiter Plate will void the actuator warranty. **Do not** exceed the torque setting indicated by the Torque Switch Limiter Plate without contacting the Limitorque Service Department.

The LY unit is equipped with a double-acting Torque Switch that has been factory preset according to the required torque value provided by the valve manufacturer or the valve supplier. Further Torque Switch adjustment should not be required; however, the Torque Switch can be reset from LOW to MEDIUM or HIGH by adjusting the Torque Switch Adjustment Screw unless it is limited by the Limiter Plate. (See Figure 8 for Torque Switch Adjustment Screw location.)


Re-wiring the Torque Switch for Non-Standard Drive Sleeve Rotation

CAUTION: Double-check wiring diagram to verify that the Torque Switch is wired appropriately for the application. The Torque Switch will not protect the valve from over-torque if the Torque Switch is not wired properly for the application.

LY series actuators are typically supplied with a CCW Drive Sleeve rotation to open a valve. The Torque Switch is marked OPEN (CCW ↺) and CLOSE (CW ↻) based upon CW Drive Sleeve rotation to close the valve. The Mechanical Dial Position Indicator (MDPI) is typically mounted for CW rotation to indicate the CLOSED position. If opposite Drive Sleeve rotation is required (CCW to close a valve), the following Torque Switch modifications are required.

1. Turn all power to the actuator OFF.
2. Reverse the OPEN and CLOSE Torque Switch labels on the ID Limiter Plate.
3. Interchange OPEN Torque Switch wires 18 and 18C with CLOSED wires 17 and 17C.
(Refer to the wiring diagram for other Torque Switch wiring configurations.)

Figure 8- Reversing Torque Switch wiring

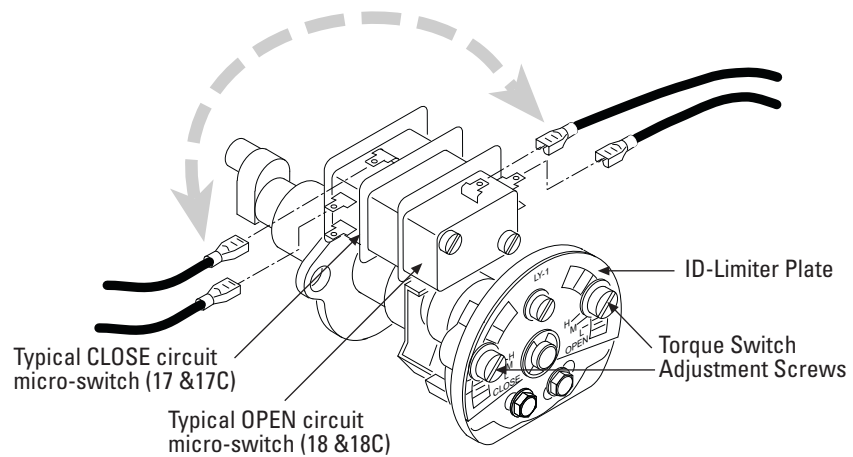

4. Remove the MDPI Plate and flip over for indication of CCW rotation to the valve's closed position. (See Figure 14 for MDPI Dial Plate.)
5. Reverse the OPEN/CLOSE directional arrow on the Handwheel.

Limit Switch and Mechanical Stop Settings

The Limit Switch and Mechanical Stops are not preset at the Limitorque factory, but must be set after mounting on the associated equipment. If the LY actuator has been shipped already installed on a valve, the actuator should have the Limit Switch and Mechanical Stops set for your application. If the actuator is not already installed on a valve or needs resetting, use the following instructions to make the appropriate settings.

The following instructions for setting the Limit Switches and Mechanical Stops are based on the typical orientation for most actuator applications. Consult the applicable wiring diagram located in the Control Compartment for the specific Limit Switch development.

NOTE: While making Limit Switch settings, remember that the Limit Cams rotate in the same direction as the valve stem.


Setting the Limit Switches

▲ WARNING: Do not manually operate actuator with devices other than installed handwheel and declutch lever. Using additive force devices (cheater bars, wheel wrenches, pipe wrenches or other devices of this nature) on the actuator handwheel or declutch lever may cause serious personal injury and/or damage to the actuator or valve.

▲ DANGER: HAZARDOUS VOLTAGE. Make sure all power is disconnected before making the following settings.

Setting the CLOSED Limit Switch

1. Put the actuator into MANUAL operation: move the Declutch Lever in the direction of the arrow on the lever until the Declutch Lever locks in place. If Declutch Lever is difficult to move see **Section Description of Manual Operation** for instructions to release the Declutch Lever.
2. Turn the Handwheel CW to move the valve to the full CLOSE position.
NOTE: Most applications require turning the Handwheel CW to obtain the full CLOSE position and CCW to obtain full OPEN position. The Drive Sleeves and Limit Cams also rotate in CW rotation to the CLOSE position and CCW to the OPEN position. If the application is configured differently, the descriptions in this manual will describe rotation directions opposite your application.
3. Loosen **Setting Nut** (piece #7-10) located at the top of the switch bracket approximately $\frac{3}{4}$ turn.
NOTE: When setting the Limit Cams by rotating to the trip point as described in Step No. 4, be careful not to move more than one cam at a time. Limit Cams that have already been set are not secure until Setting Nut (piece #7-10) is re-tightened.

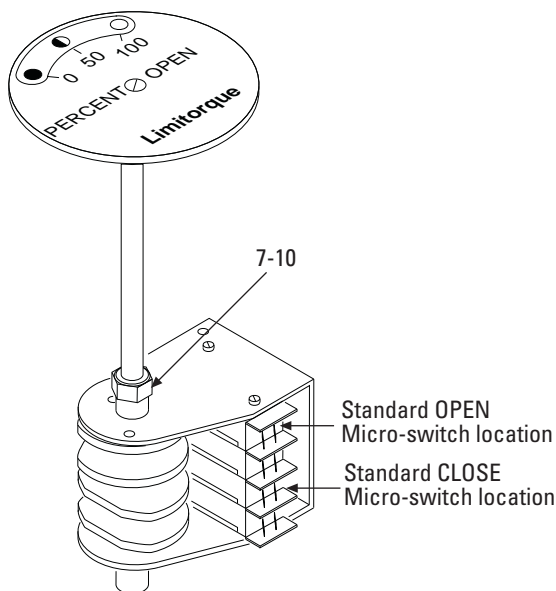
Figure 9 - Limit Switch Setting Nut

4. Rotate the CLOSE Limit Cam CW through the high side to the trip point until the Switch Plunger is released. This causes the N.O. (normally open) contact to open.

NOTE: There will be no electrical continuity at the trip point when measuring with an ohmmeter between the common lead and the N.O. lead. You may also hear a faint “click” at the trip point.

NOTE: During actuator operation, when the Switch Plunger trips, the N.O. contact is released causing the Limit Switch to stop the actuator in the CLOSED position.

Figure 10 - Setting CLOSE Limit Cam

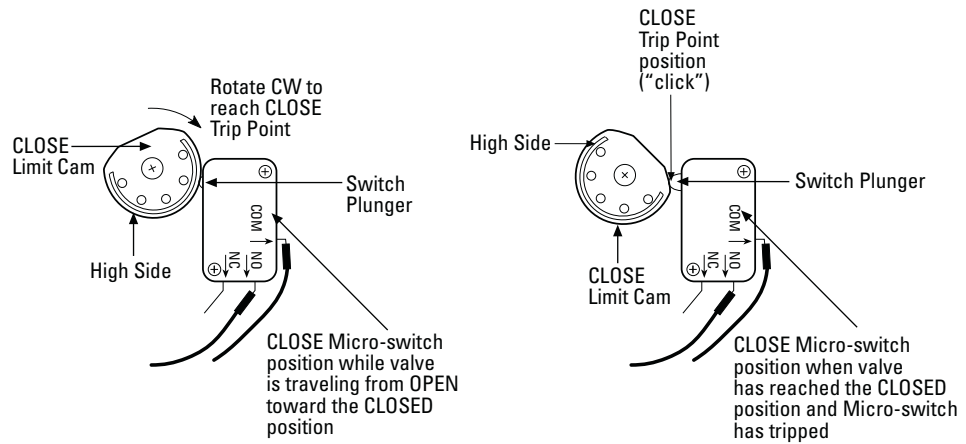

5. Re-tighten **Setting Nut** (piece #7-10).

Setting the OPEN Limit Switch


NOTE: When setting the OPEN Limit Switch, be careful not to rotate the CLOSE Limit Cam; rotating it will change the adjustments you previously made on the CLOSE Limit Switch.

1. Put the actuator into MANUAL operation by moving the Declutch Lever in the direction of the arrow on the lever until the Declutch Lever locks in place. If Declutch Lever is difficult to move see **Section Description of Manual Operation** for instructions to release the Declutch Lever.
2. Turn the Handwheel to move the valve to the full OPEN position.

NOTE: Most applications require turning the Handwheel CCW to obtain the full OPEN position. The Drive Sleeve and Limit Cams also rotate in CCW rotation to the OPEN position. If your application is configured differently, keep in mind the descriptions in this manual will describe rotation directions opposite of your application.
3. Loosen **Setting Nut** (piece #7-10) located at the top of the switch bracket. (See Figure 9.)
4. Rotate the OPEN Limit Cam CCW through the high side to the *trip point* until the Switch Plunger is released. This causes the N.O. contact to open. There will be no electrical continuity at the *trip point* when measuring with an ohmmeter between the common lead and the N.O. lead; you may also hear a faint “click” at the trip point.

NOTE: During actuator operation, when the Switch Plunger trips, the N.O. contact is released causing the Limit Switch to stop the actuator in the OPEN position.

Figure 11 - Setting OPEN Limit Cam

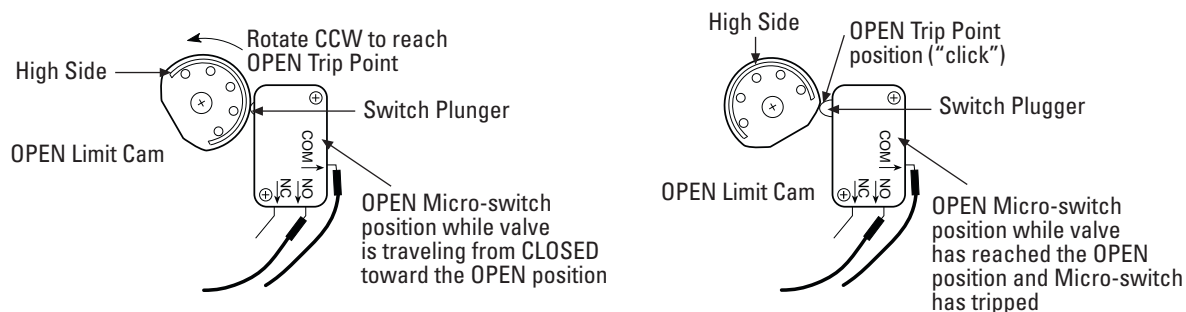

5. Re-tighten **Setting Nut** (piece #7-10).

Mechanical Stops

Setting the CLOSED Mechanical Stop on the LY 1001

Table 6 – Mechanical Stop Set Screws


Unit Type	Mechanical Stop Set Screw Size	Set Screw Size
LY 1001	3/8-16 x 1.25"	3/8-16 x 0.375

Piece numbers refer to Figure 12.

1. Set **CLOSE Mechanical Stop Set Screw** (piece #58) by removing the **Set Screw** (piece #59).
2. Using the Handwheel, turn the valve to the CLOSE position. Make sure the valve is fully seated before setting the mechanical stop.
3. Rotate **Mechanical Stop Set Screw** (piece #58) in the CW direction until contact with the **Torque Nut** (piece #32) occurs. (See Figure 11.)
4. Back-off Mechanical Stop Set Screw (CCW direction) approximately 1-1/2 turns.
5. Re-install **Set Screw** (piece #59).
6. Manually operate the actuator through the close limit to assure setting is correct.

NOTE: The Mechanical Stops are intended to protect the equipment from overtravel if a Limit Switch fails. The valve should not torque out against the Mechanical Stop Set Screw during normal OPEN/CLOSE cycles.

Figure 12 – Mechanical Stop Set Screw adjusted to Torque Nut contact point on LY 1001

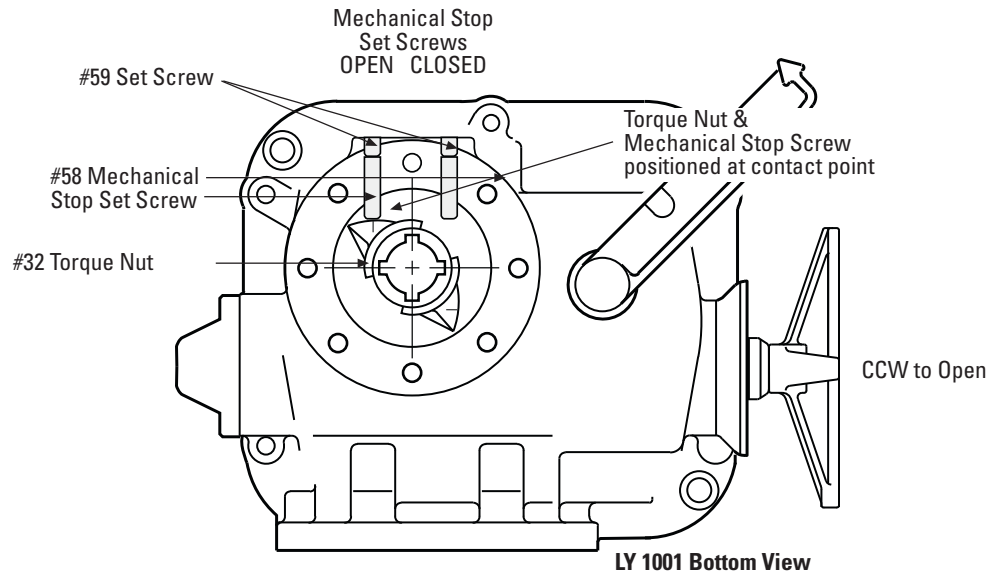

Setting the CLOSED Mechanical Stop on the LY 2001/3001

Table 7 – Mechanical Stop and Lock Nut Screw Sizes


Unit Type	Stop Screw Size	Locking Nut Size
LY 2001/3001	5/8-16 x 3"	5/8-11

All piece numbers refer to Figure 13.

1. Set **CLOSE Mechanical Stop Screws** (piece #58) (Hex Head Cap Screw) by loosening **Locking Nut** (piece #59) (Hex Head Nut).
2. Using the Handwheel, turn the valve to the CLOSE position. Make sure the valve is fully seated before setting the mechanical stop.
3. Rotate **Mechanical Stop Screw** (piece #58) in the CW direction until contact with the **Stop Pin** (piece #28) occurs.
4. Back off Mechanical Stop Screw (CCW direction) approximately 1-1/2 turns.
5. Re-tighten Locking Nut.
6. Manually operate the actuator through the close limit to assure setting is correct.

NOTE: The Mechanical Stops are intended to protect the equipment from overtravel if a Limit Switch fails. The valve should not torque out against the Mechanical Stop Screw during normal OPEN/CLOSE cycles.

Figure 13 - Mechanical Stop Screw adjusted to Torque Nut contact point on LY 2001 and 3001

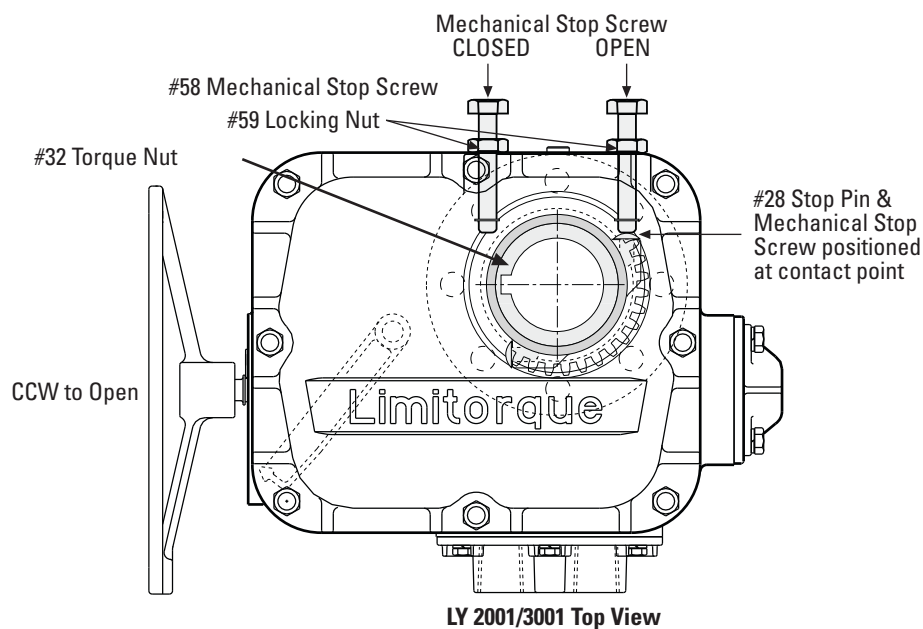

Setting the OPEN Mechanical Stop on the LY 1001

Piece numbers refer to Figure 12.

1. With the valve in the full OPEN position, set OPEN **Mechanical Stop Set Screw** (piece #58) by removing the **Set Screw** (piece #59). (See Figure 11 for orientation.)
2. Using the Handwheel, turn the valve to the OPEN position. Verify the valve is fully open before setting the Mechanical Stop Set Screw.
3. Rotate Mechanical **Stop Set Screw** (piece #58) in the CW direction until contact with the **Torque Nut** (piece #32) occurs.
4. Back-off Mechanical Stop Set Screw (CCW direction) approximately 1-1/2 turns.
5. Re-install **Set Screw** (piece #59).
6. Manually operate the actuator through the open limit to assure setting is correct.

Setting the OPEN Mechanical Stop on the LY 2001/3001

Piece numbers refer to Figure 13.

1. With the valve in the full OPEN position, set OPEN **Mechanical Stop Screws** (piece #58) (Hex Head Cap Screw) by loosening **Locking Nut** (piece #59) (Hex Head Nut). (See Figure 12 for orientation.)
2. Using the Handwheel, turn the valve to the OPEN position. Make sure the valve is fully open before setting the Mechanical Stop.
3. Rotate **Mechanical Stop Screw** (piece #58) in the CW direction until contact with the **Stop Pin** (piece #28) occurs.
4. Back-off Mechanical Stop Screw (CCW direction) approximately 1-1/2 turns.
5. Re-tighten Locking Nut.
6. Manually operate the actuator through the open limit to assure setting is correct.


NOTE: The Mechanical Stops are intended to protect the equipment from overtravel if a Limit Switch fails. The valve should not torque out against the Mechanical Stop Screw during normal OPEN/CLOSE cycles.

Setting the MDPI (Mechanical Dial Position Indicator)

Piece numbers refer to Figure 14.

1. After setting the Limit Switch and Mechanical Stop Settings, manually position the valve in the fully CLOSED position.
2. **Loosen Screw** (piece #147) on MDPI.
3. Make sure the **MDPI Plate** (piece #146) is aligned properly with the **Dial Window Retaining Plate Arrow** (piece #108), usually 0% (CLOSED) should align with the arrow. (See Figure 14.)
 NOTE: If your application uses CW handwheel rotation to OPEN, flip the MDPI Plate over to properly orient the OPEN and CLOSED position on the MDPI Plate.
4. Re-tighten the **Screw** (piece #147) on the **MDPI Plate** (piece #146).

Figure 14 - Aligning MDPI with Dial Window Retaining Plate

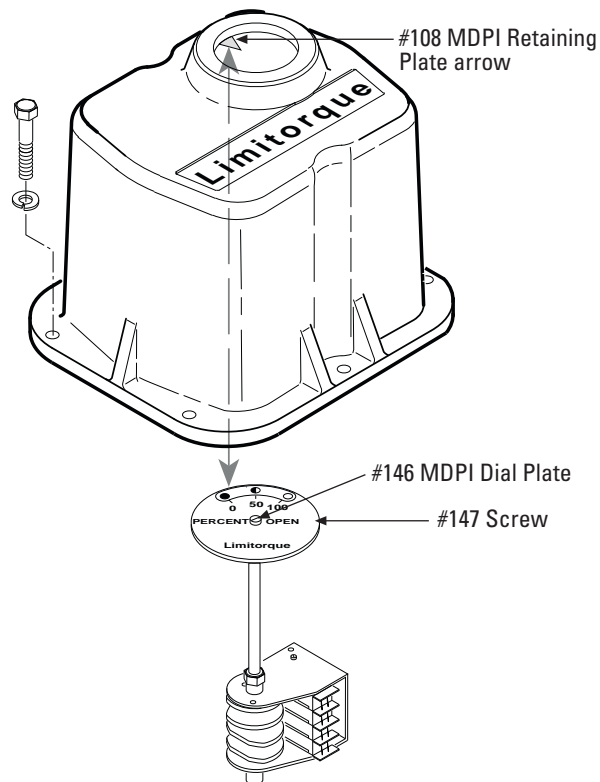

Setting the Potentiometer


If the LY actuator includes a Feedback Potentiometer used for remote valve position indication, use an ohmmeter to calibrate the position of the potentiometer.

▲ DANGER: HAZARDOUS VOLTAGE. Turn power off before calibrating the Feedback Potentiometer.

1. Using the Handwheel, position the actuator to mid-travel (valve at the 50% position).
2. Disconnect the Potentiometer Wiring Harness from where it is plugged in or connected to a Terminal Strip.
3. Using an ohmmeter, verify that the potentiometer is in mid-travel. The resistance from each End Connection to the Center Connection should be half of the full resistance of the Potentiometer.

Example: 1000-ohm potentiometer should read approximately 500 ohms from one of the End Connections to the Center Connection.

Figure 15 - Potentiometer calibration components

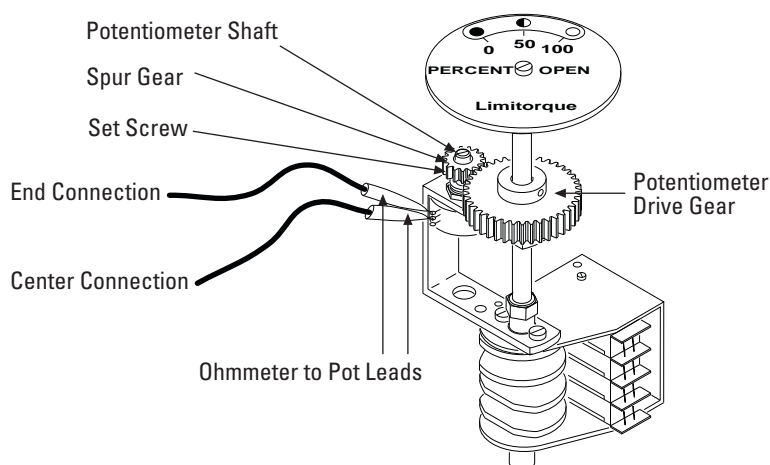

4. If the reading is not correct, proceed to Step No. 5. If the reading is correct, proceed to Step No. 6.
5.
 - a. Loosen the small Set Screw that retains the Spur Gear to the Potentiometer Shaft.
 - b. Using a small flat-tipped screwdriver in the slotted Potentiometer Shaft, rotate the Shaft until the correct reading is obtained as described in Step No. 3.
 - c. Re-tighten the Set Screw.
6. Disconnect the ohmmeter and re-connect the Potentiometer wiring to the original connection.

Operation

Typical LY 1001 Operation

LY actuators are always available for motor operation when the motor is energized.

NOTE: Applied voltage rating = voltage rating of actuator $\pm 10\%$

▲ WARNING: Do not manually operate the actuator with devices other than installed Handwheel and Declutch Lever. Using force beyond the ratings of the unit and/or using additive force devices such as cheater bars, wheel wrenches, pipe wrenches or other devices on the actuator Handwheel or Declutch Lever may cause serious personal injury and/or damage to the actuator or valve.

CAUTION: Do not motor operate the valve without first setting or checking the limit switch setting and motor direction. Do not force the Declutch Lever into the motor operation position. The Declutch Lever returns to motor operation position automatically when the motor is energized.

Verify Correct Motor Rotation (Phasing) and OPEN/CLOSE Pushbutton Operation

Correct motor rotation must be verified to ensure that serious damage to valve or other equipment does not occur. If the actuator motor rotates in the wrong direction, damage could occur by over-torquing equipment into a seated position.

Prior to being shipped from the factory each actuator is inspected to verify proper operation of the Torque and position Limit Switches and to ensure that they function correctly, i.e., closes when the CLOSE pushbutton is depressed, opens with the OPEN pushbutton, etc. These inspections are made with a properly phased power source connected as described in the actuator manual.

CAUTION: To ensure proper operation and to prevent your actuator or other actuated equipment from damage, verify that your unit is properly connected to its power source.

Three-Phase Motor

NOTE: Your application may vary from the standard wiring configuration for three-phase shown in Figures 16 and 17. Refer to the specific actuator wiring diagram for wiring configuration.

1. Using the Handwheel, move the valve to a midtravel position. Midtravel position allows electrical operation in the valve "safe" area and keeps the OPEN and CLOSED Limit Switches from tripping while testing motor direction.
2. Test motor direction by momentarily pressing the OPEN pushbutton:
 - a. If the actuator moves toward CLOSED, immediately turn all power OFF and reverse the motor leads T1 and T3, on terminal strip.
 - b. If the actuator moves toward OPEN, the motor is wired properly for the application.

Figure 16 – Standard actuator/three-phase

Valve shown in full open position

Limit Switch Contact Development			
LIMIT SWITCH CONTACT	VALVE POSITION		FUNCTION
	FULL OPEN	FULL CLOSE	
4	—	█	OPEN LIMIT
5	—	█	INDICATION
8	█	—	CLOSED LIMIT
9	█	—	INDICATION

TS17—Closing torque switch interrupts control circuit if mechanical overload occurs during closing cycle.

TS18—Opening torque switch interrupts control circuit if mechanical overload occurs during closing cycle.

NOTES

1. - - - - Open contact
2. █ Close contact
3. All limit switch trip points are fully adjustable.

LEGEND

- HTR**—Space heater (LY COMPT.)
- POT**—Slidewire transmitter (optional)
(See certification sheet if supplied)
- TH. OL**—Thermal overload (internal)

Note: Refer to certified data for construction purposes 16-476-1631-2B.

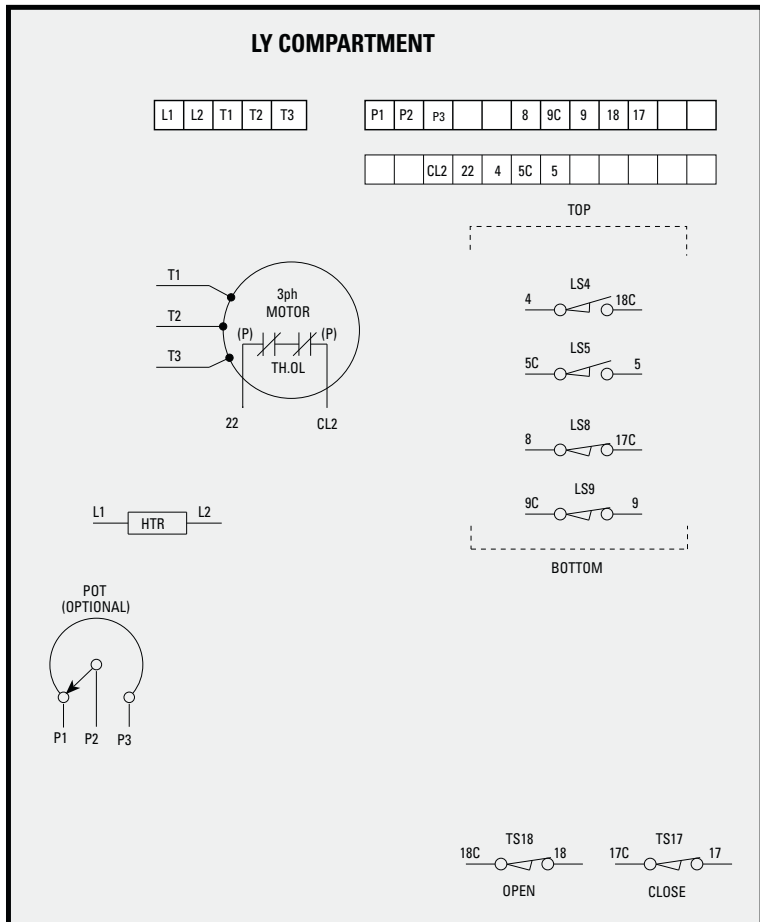
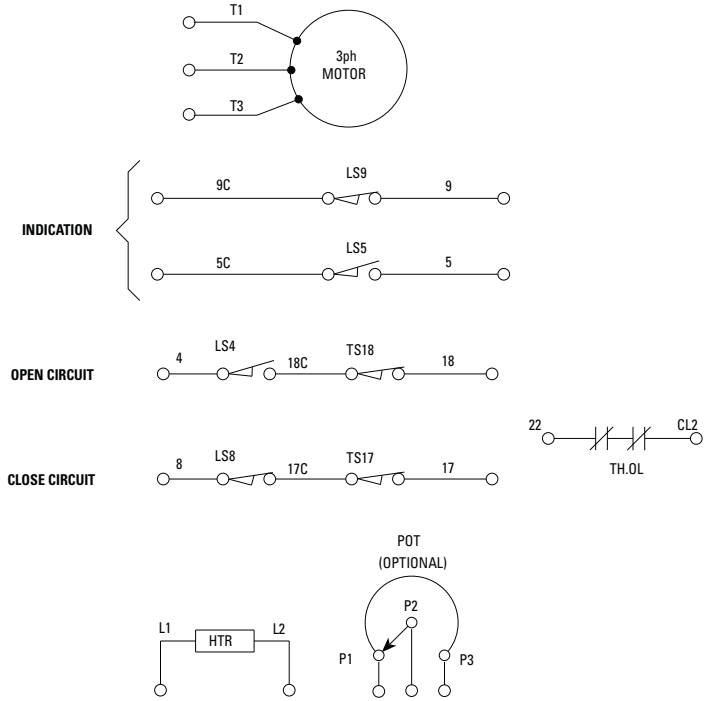


Figure 17— Three-phase with control package

Valve shown in full open position


Limit Switch Contact Development			FUNCTION
LIMIT SWITCH CONTACT	VALVE POSITION		
	FULL OPEN	FULL CLOSE	
2	---	█	SPARE
3	█	---	SPARE
4	---	█	OPEN LIMIT
5	---	█	IND LIGHT
6	---	█	INDICATION
7	█	---	INDICATION
8	█	---	CLOSED LIMIT
9	█	---	IND LIGHT

TS17—Closing torque switch interrupts control circuit if mechanical overload occurs during closing cycle.

TS18—Opening torque switch interrupts control circuit if mechanical overload occurs during opening cycle.

NOTES


1. --- Open contact
2. █ Close contact
3. All limit switch trip points are fully adjustable.

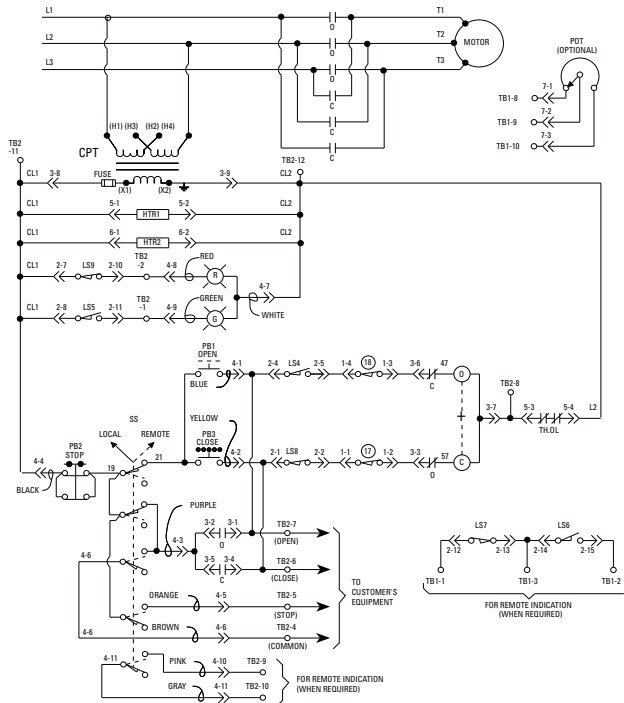

LEGEND

- O** — Open contact
- C** — Close contact
- ⓪** — Opening coil
- Ⓞ** — Closing coil
- CPT** — Control power transformer
- +** — Mechanical interlock
- TH. OL** — Thermal overload contacts
- SS** — Selector switch (local-remote)
- PB1** — Open pushbutton
- PB2** — Stop pushbutton
- PB3** — Close pushbutton
- HTR1** — Space heater (LY Compt.)
- HTR2** — Space heater (Control Compt.)
- POT** — Slidewire transmitter (optional)
(See certification sheet if supplied)
- J1** — Connector for Modutronic 20 units
- Ⓡ** — Red indicating light
- Ⓢ** — Green indicating light

Note: Refer to certified data for construction purposes 16-476-1632-3B.

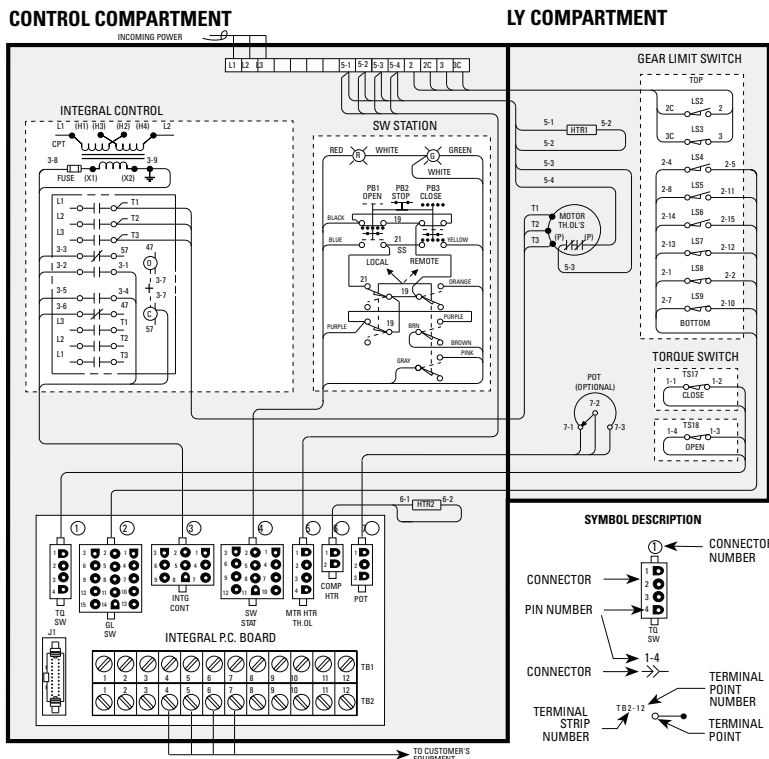


Single-phase Motor

NOTE: Your application may vary from the standard wiring configuration for the single-phase motor shown in Figures 18 and 19. Refer to the specific actuator wiring diagram for wiring configuration.

1. Using the Handwheel, move the valve to a midtravel position. Midtravel position allows electrical operation in the valve “safe” area and keeps the OPEN and CLOSED limit switches from tripping while testing motor direction.
2. Momentarily press the OPEN pushbutton to test motor direction. If the actuator moves toward CLOSED, immediately turn power OFF and proceed with the instructions that match your application. Permanent Split Capacitor single-phase motors can be connected for opposite rotation by interchanging the leads T1 and T2 coming from the motor to the terminal strip.

Figure 18 – Standard actuator/single-phase

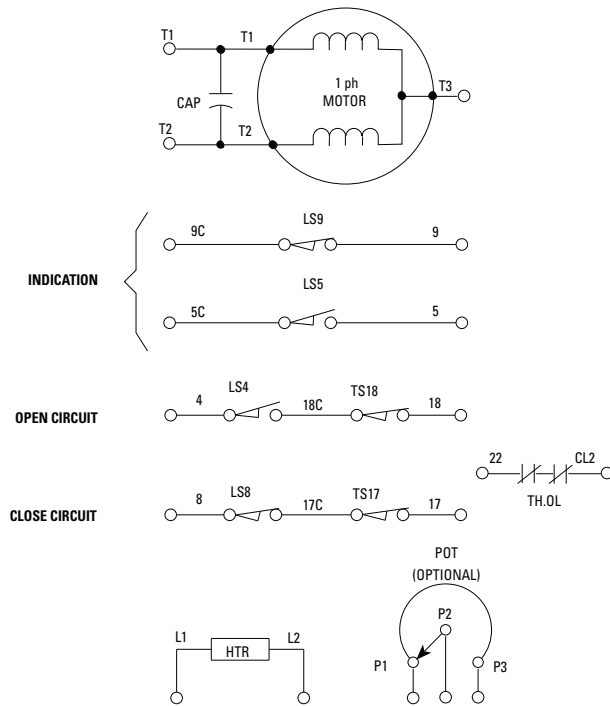

Valve shown in full open position


Limit Switch Contact Development			
LIMIT SWITCH CONTACT	VALVE POSITION		FUNCTION
	FULL OPEN	FULL CLOSE	
4	---	█	OPEN LIMIT
5	---	█	INDICATION
8	█	---	CLOSED LIMIT
9	█	---	INDICATION

TS17 —Closing torque switch interrupts control circuit if mechanical overload occurs during closing cycle.

TS18 —Opening torque switch interrupts control circuit if mechanical overload occurs during opening cycle.

NOTES

1. --- Open contact
2. █ Close contact
3. All limit switch trip points are fully adjustable.

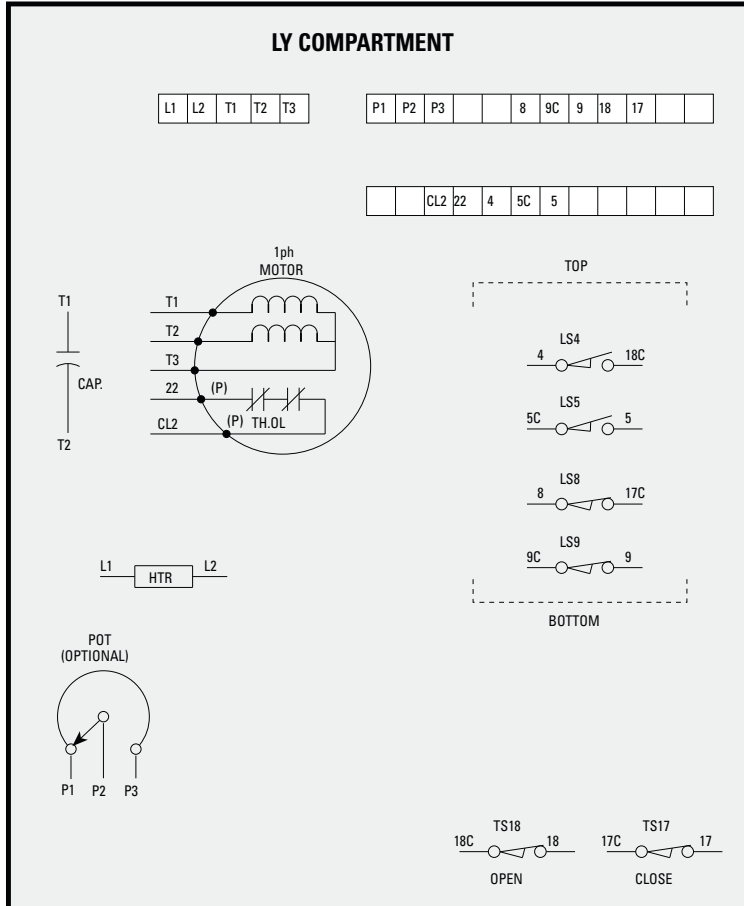


LEGEND

- HTR** —Space heater (LY COMPT.)
- POT** —Slidewire transmitter (optional)
(See certification sheet if supplied)
- TH. OL** —Thermal overload (internal)

Note: Refer to certified data for construction purposes 16-476-1630-2C.

Figure 19 – Single-phase with control package

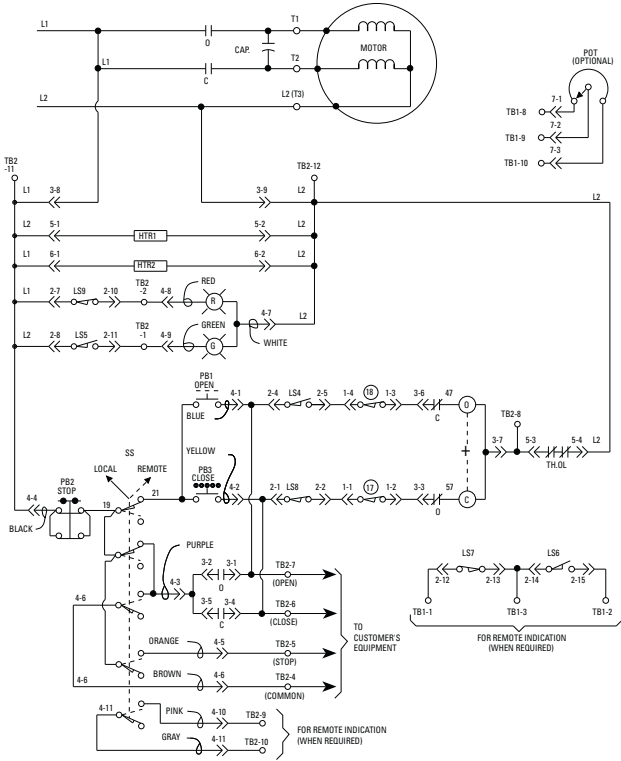

Valve shown in full open position


Limit Switch Contact Development			
LIMIT SWITCH CONTACT	VALVE POSITION		FUNCTION
	FULL OPEN	FULL CLOSE	
2	---	█	SPARE
3	█	---	SPARE
4	█	█	OPEN LIMIT
5	█	█	IND LIGHT
6	---	█	INDICATION
7	█	---	INDICATION
8	█	---	CLOSED LIMIT
9	█	---	IND LIGHT

TS17 — Closing torque switch interrupts control circuit if mechanical overload occurs during closing cycle.

TS18 — Opening torque switch interrupts control circuit if mechanical overload occurs during opening cycle.

NOTES

1. --- Open contact
2. █ Close contact
3. All limit switch trip points are fully adjustable.

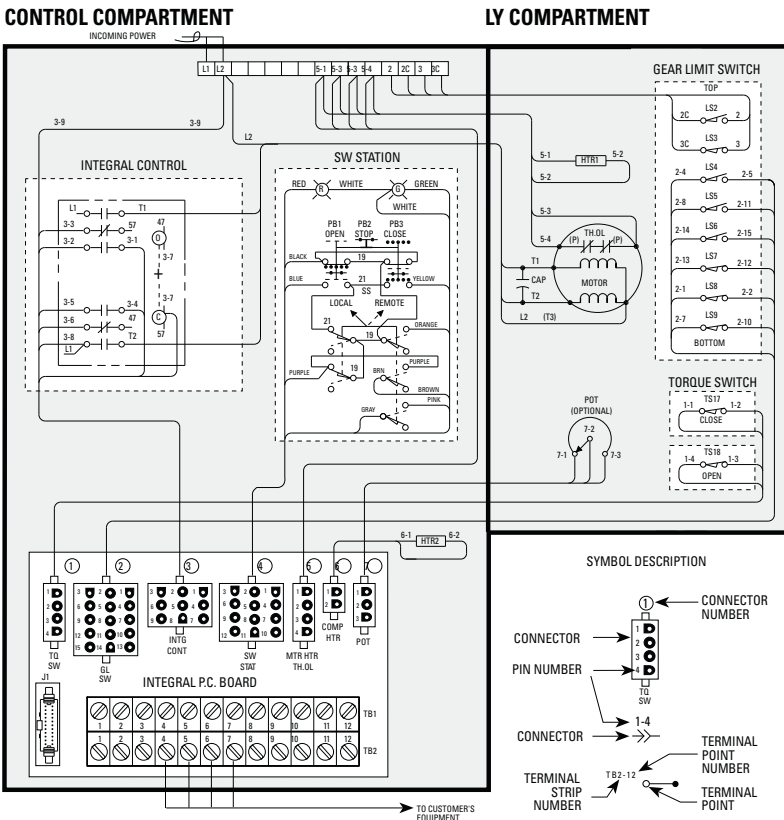

LEGEND

- O — Open contact
- C — Close contact
- ⊙ — Opening coil
- ⊙ — Closing coil
- CAP — Motor capacitor
- + — Mechanical interlock
- TH. OL — Thermal overload contacts
- SS — Selector switch (local-remote)
- PB1 — Open pushbutton
- PB2 — Stop pushbutton
- PB3 — Close pushbutton
- HTR1 — Space heater (LY Compt.)
- HTR2 — Space heater (Control Compt.)
- POT — Slidewire transmitter (optional)
- (See certification sheet if supplied)
- J1 — Connector for Modutronic 20 units
- Ⓡ — Red indicating light
- Ⓢ — Green indicating light

Note: Refer to certified data for construction purposes 16-476-1633-3D.

DC Motor

NOTE: Your application may vary from the standard wiring configuration for the dc motor. Refer to the specific actuator wiring diagram for wiring configuration.

1. Using the Handwheel, move the valve to a midtravel position. Midtravel position allows electrical operation in the valve “safe” area and keeps the OPEN and CLOSED limit switches from tripping while testing motor direction.
2. Test motor direction by momentarily pressing the OPEN pushbutton:
 - B. If the actuator moves toward CLOSED, immediately turn all power OFF and reverse the motor leads A1 and A2 on the terminal strip.
 - C. If the actuator moves toward OPEN, the motor is wired properly for the application.

Electrical Start-Up

1. Check that the actuator has been correctly lubricated. This is particularly important if the actuator has been in long-term storage.
2. Ensure that the Torque Switch and Limit Switch have been properly set per **Section Torque Switch** and **Section Setting the Limit Switches** respectively.
3. Engage MANUAL operation and hand-crank valve well away from the OPEN or CLOSED end of travel.
4. Turn power ON and push the OPEN button to electrically operate the actuator.
5. Verify output rotation:
 - If Motor rotation (phase) is correct, the valve will begin to open.
 - If the valve begins to CLOSE — STOP IMMEDIATELY.
 Refer to **Section Verify Correct Motor Rotation (Phasing) and OPEN/CLOSE Pushbutton Operation** to correct the motor rotation.
6. If the actuator configuration has a control package, see the specific control package Instruction and Maintenance Manual for proper setup and calibration.

The actuator should operate correctly and will stop at the end of travel by the Torque and Limit Switch functions.

Manual Operation

▲ WARNING: Do not manually operate actuator with devices other than installed handwheel and declutch lever. Using additive force devices (cheater bars, wheel wrenches, pipe wrenches or other devices of this nature) on the actuator handwheel or declutch lever may cause serious personal injury and/or damage to the actuator or valve.

Piece numbers refer to Figures 20 (page 27), 21 (page 28), and 22 (page 29) for LY 1001 and Figure 23 (page 30), 24 (page 31), 25 (page 32), and 26 (page 33) for LY 2001/3001.

The LY actuator has a handwheel for manual operation. The unit can be manually operated any time the motor is not energized.

1. To manually operate the actuator, push the **Declutch Lever** (piece #45) CW approximately 20° until it latches.
2. If the Declutch Lever will not turn 20° or it does not latch, DO NOT FORCE. Rotate the **Handwheel** (piece #41) slightly (in either direction) while continuing to push the Declutch Lever in the CW direction; the Declutch Lever will latch in place.

When the Declutch Lever is latched in place, the **Clutch** (piece #13) is moved until its lugs engage with the lugs on the **Handwheel Clutch** (piece #16). This position is maintained indefinitely by the **Declutch Fork Assembly** (piece #46). When the motor is energized, a flat on the **Input Worm Gear** (piece #18) releases the Declutch Fork Assembly, which pushes the Clutch into motor operation by the **Declutch Return Spring** (piece #47).


Motor Operation

CAUTION: Do not force the Declutch Lever into motor operation. Lever will automatically return to motor operation when the motor is energized.

Piece numbers refer to Figures 20, 21, and 22, for LY 1001 and Figures 23, 24, 25, and 26 for LY 2001/3001.


The **Motor Pinion Gear** (piece #54) turns the **Worm Shaft Pinion Gear** (piece #53) which is part of the **Input Worm Shaft** (piece #31). The Input Worm Shaft drives the **Input Worm Gear** (piece #18) which is lugged to the **Clutch Sleeve** (piece #13). The Input Worm Gear drives the Worm Shaft Assembly through the lugs and splines on the Clutch Sleeve. The **Output Worm** (piece #15) on the Worm Shaft Assembly turns the **Drive Sleeve** (piece #10). The Drive Sleeve accepts the **Torque Nut** (piece #32) that is bored and keyed to fit and turn the particular valve stem.

Figure 20 – LY 1001 cover and associated part.

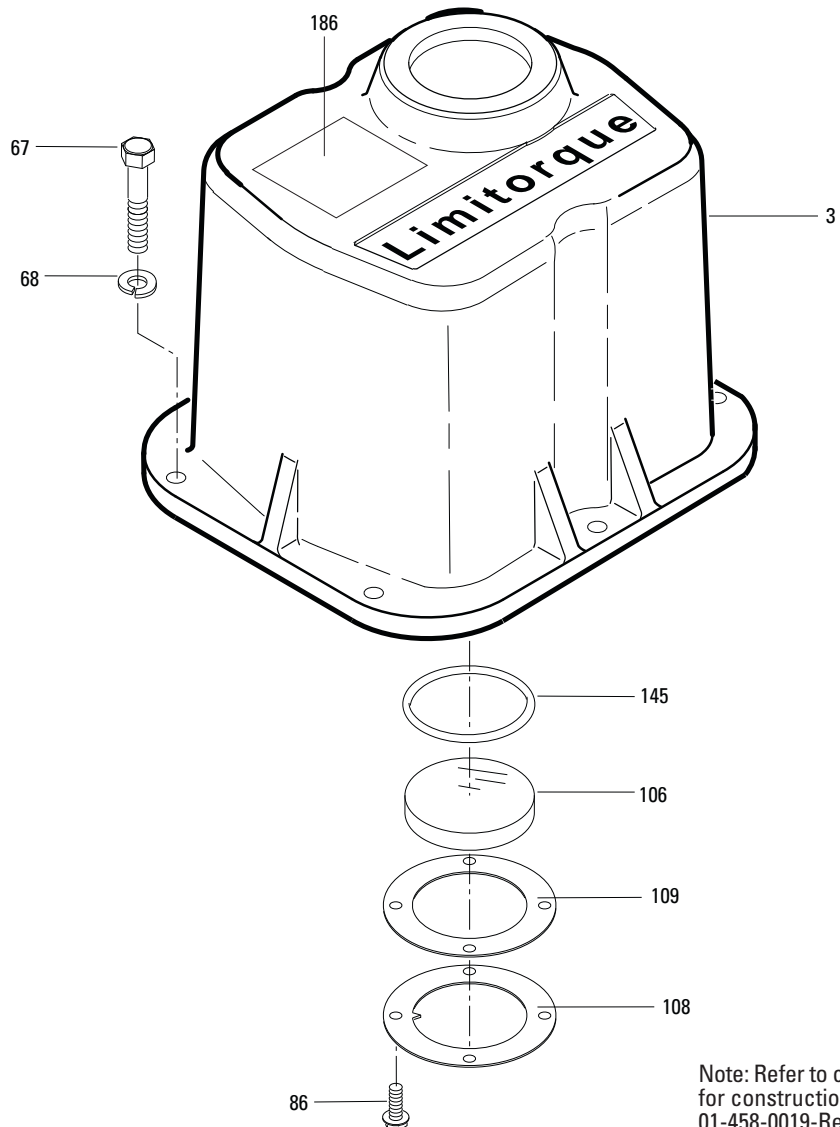


Note: Refer to certified data for construction purposes 01-458-0019-Rev A.

Figure 21 – LY 1001 top plate and associated parts

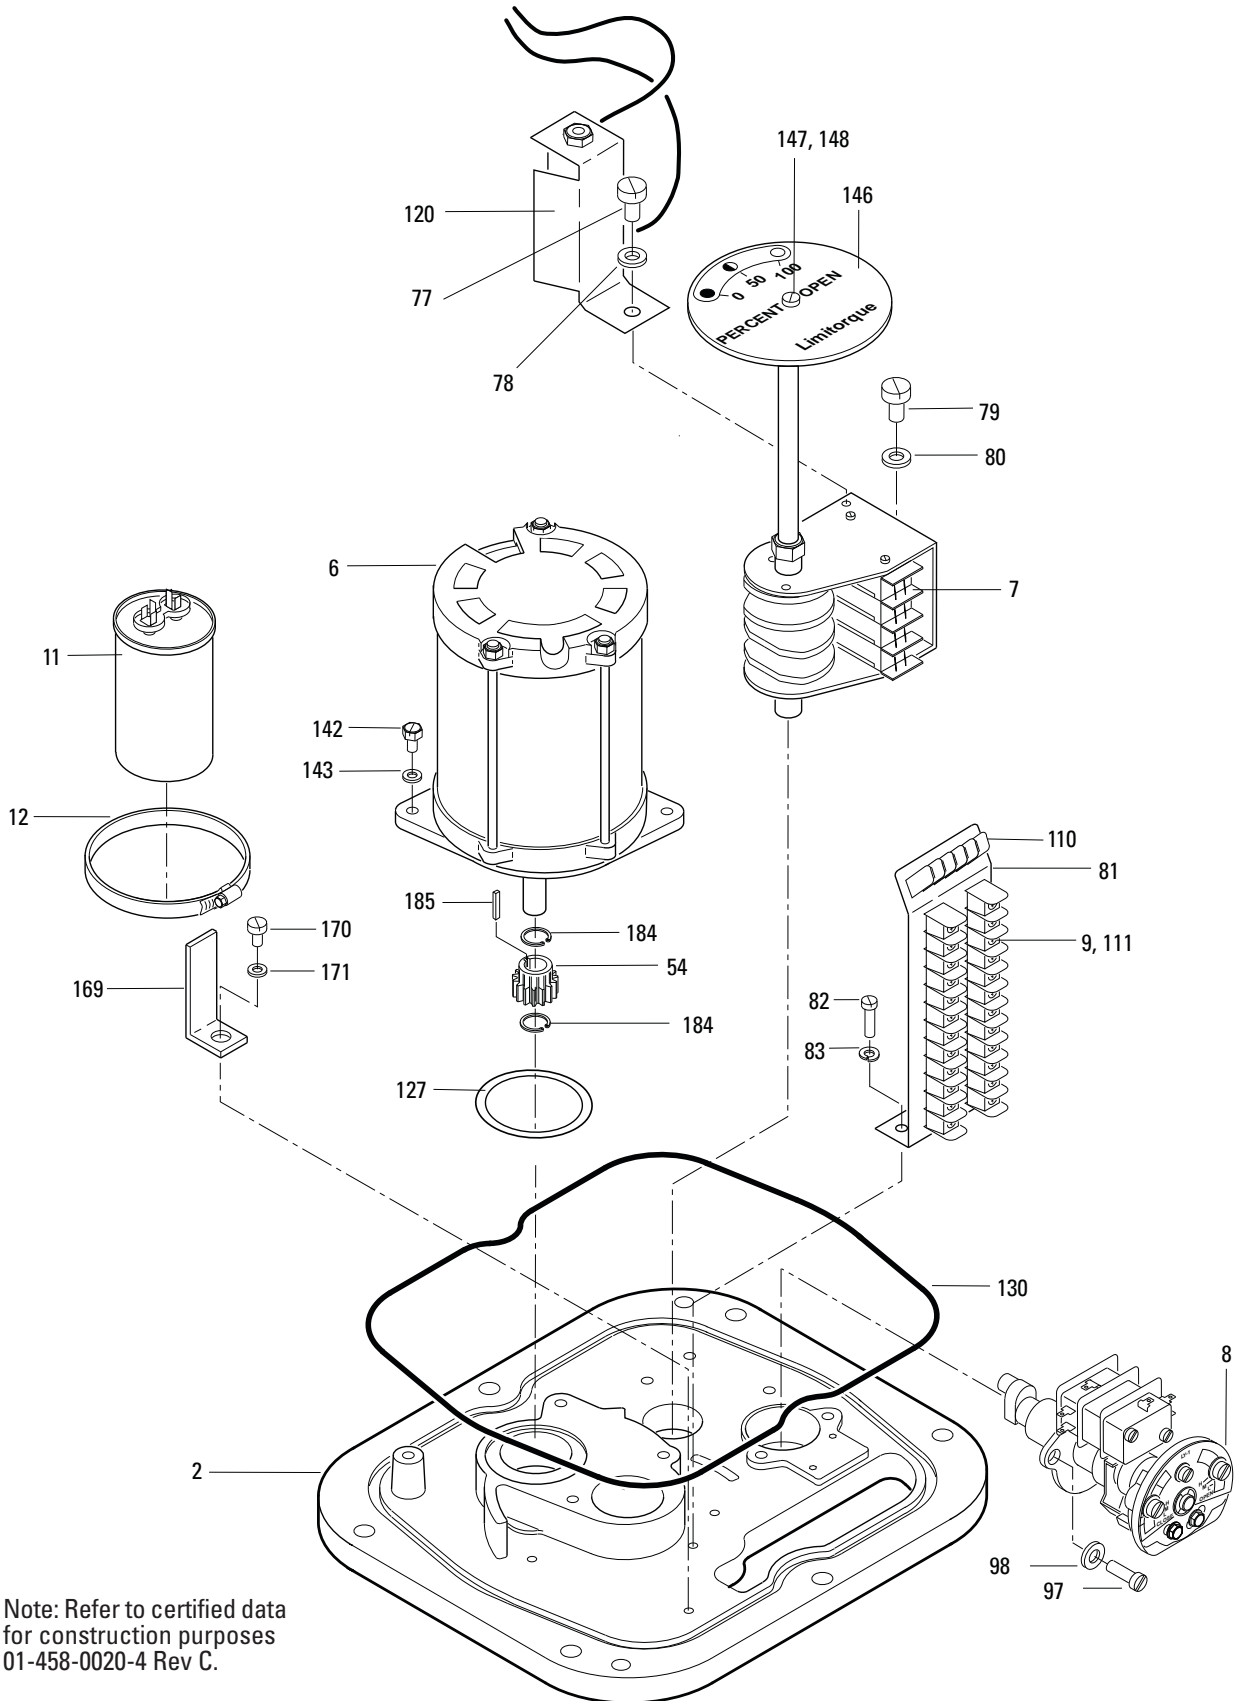

Note: Refer to certified data for construction purposes 01-458-0020-4 Rev C.

Figure 22 – LY 1001 housing and associated parts

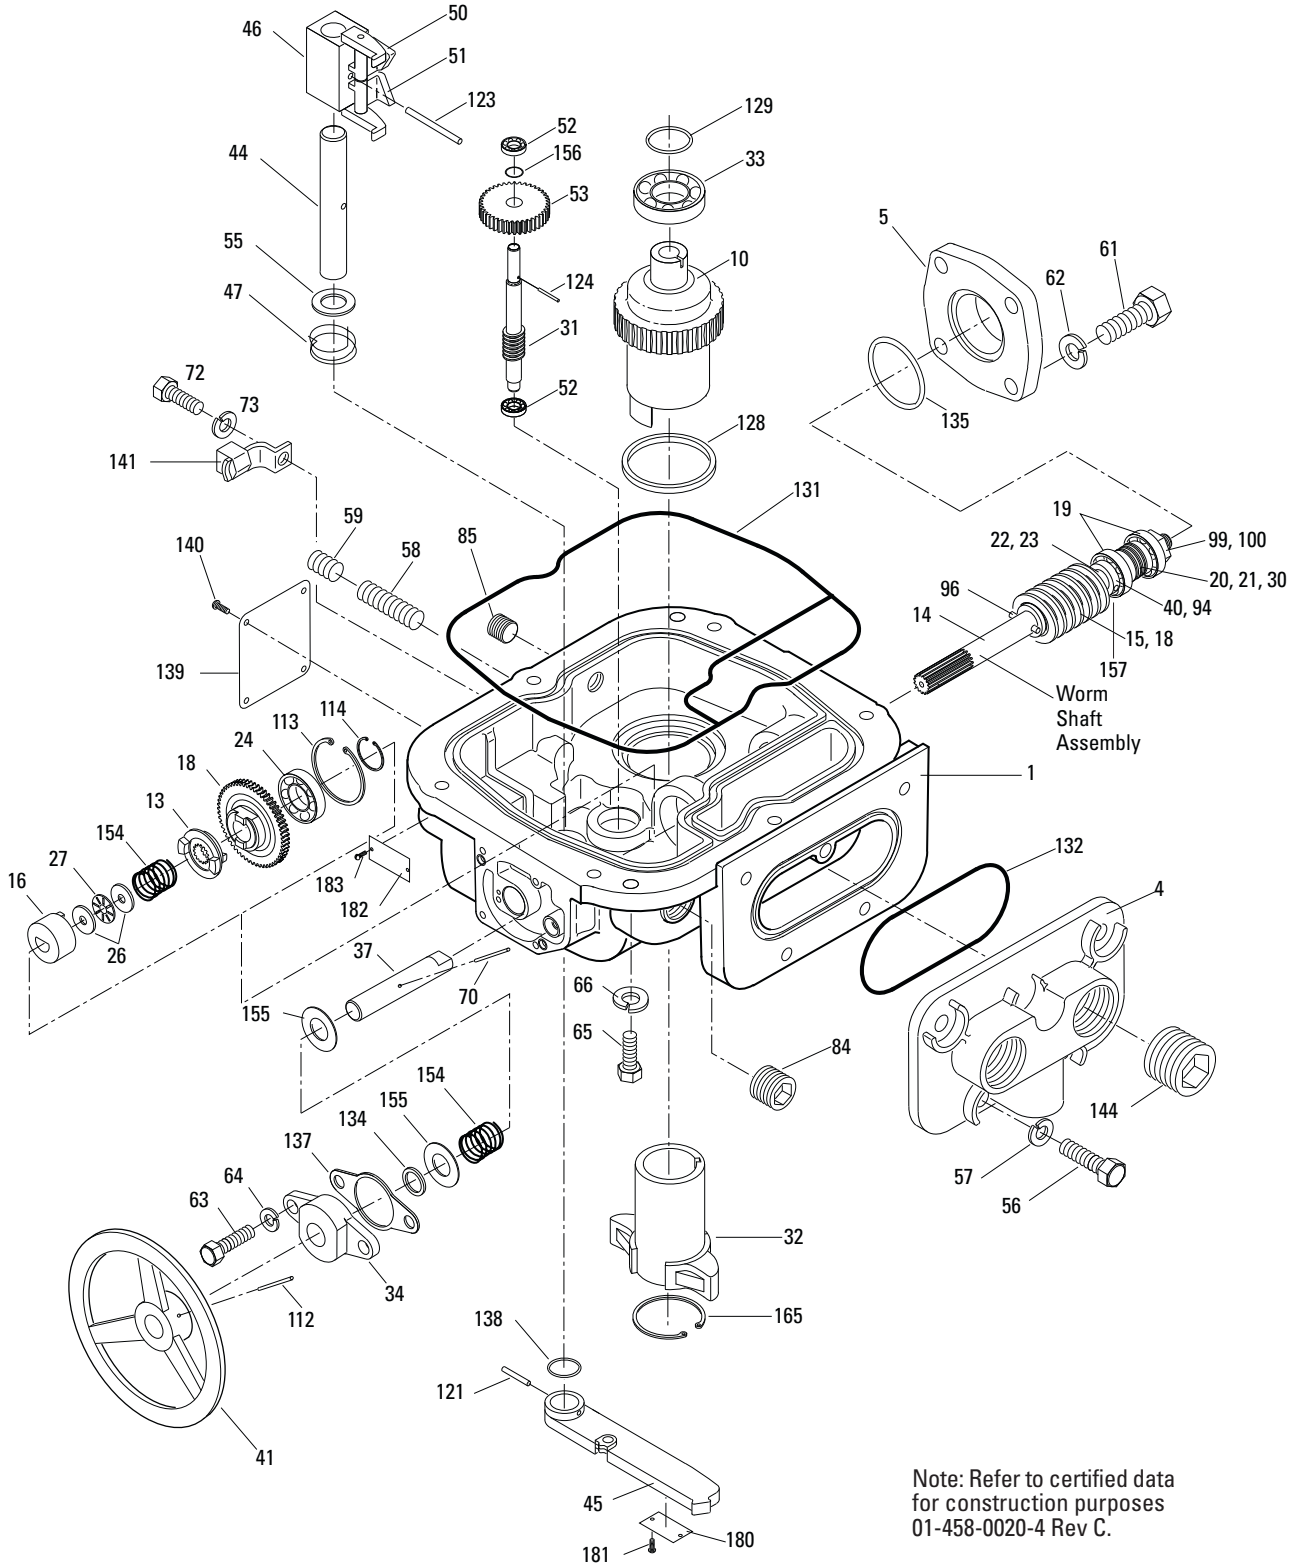

Note: Refer to certified data for construction purposes
01-458-0020-4 Rev C.

Figure 23 – LY 2001/3001 cover and associated parts

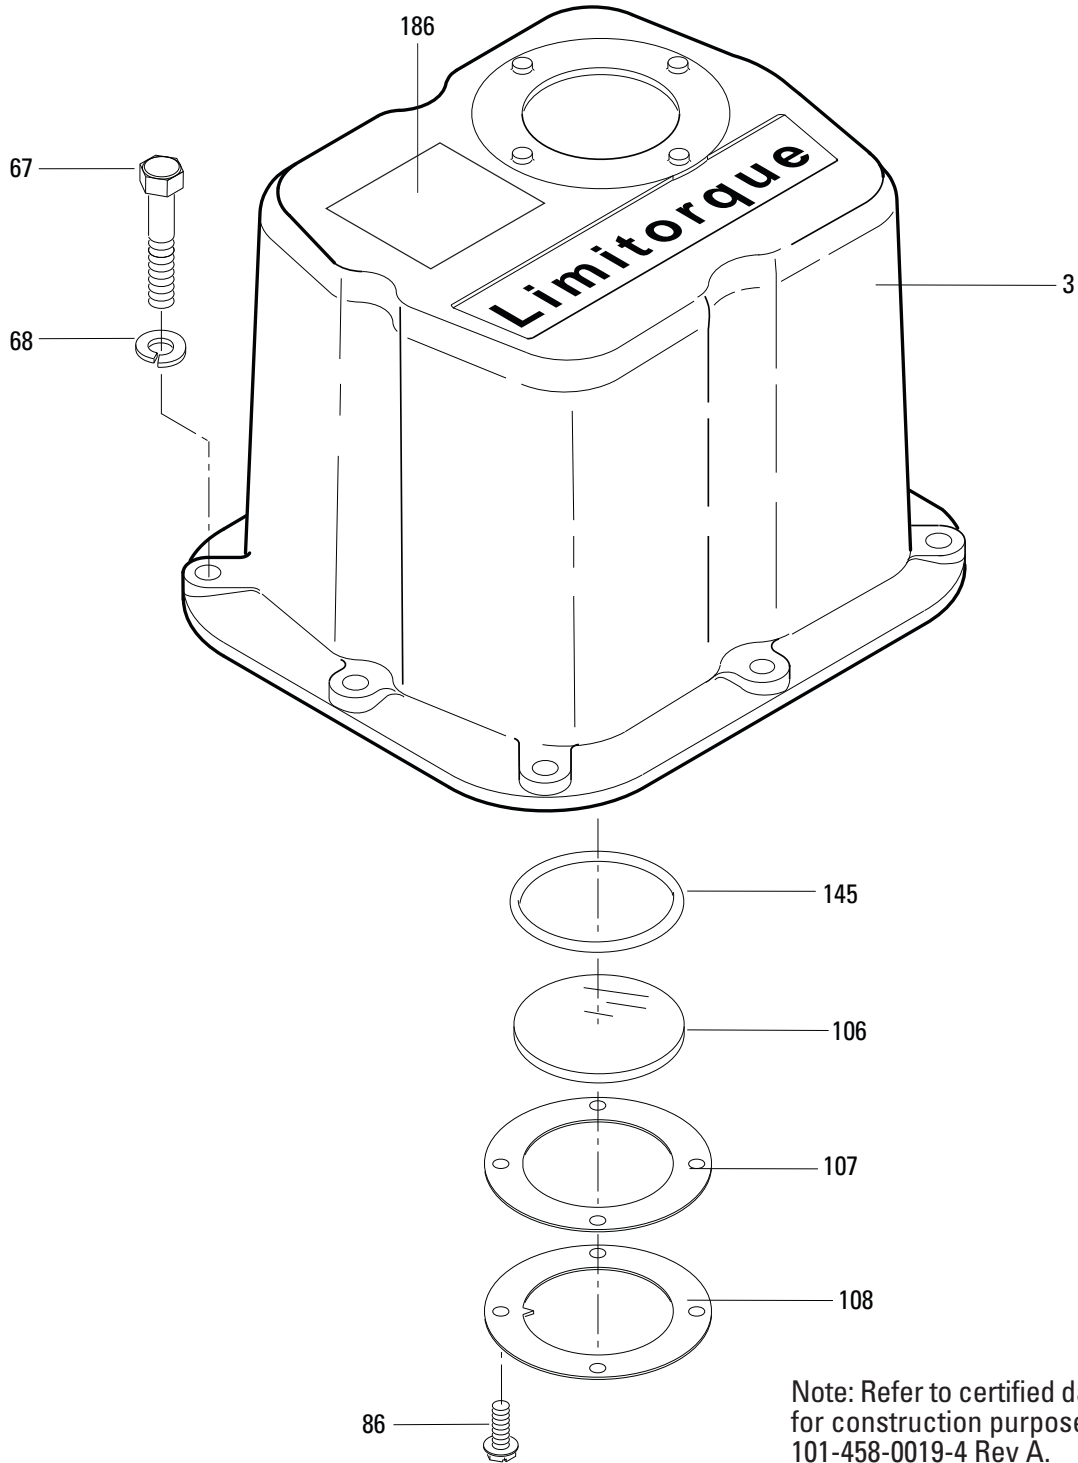


Figure 24 – LY 2001/3001 top plate and associated parts

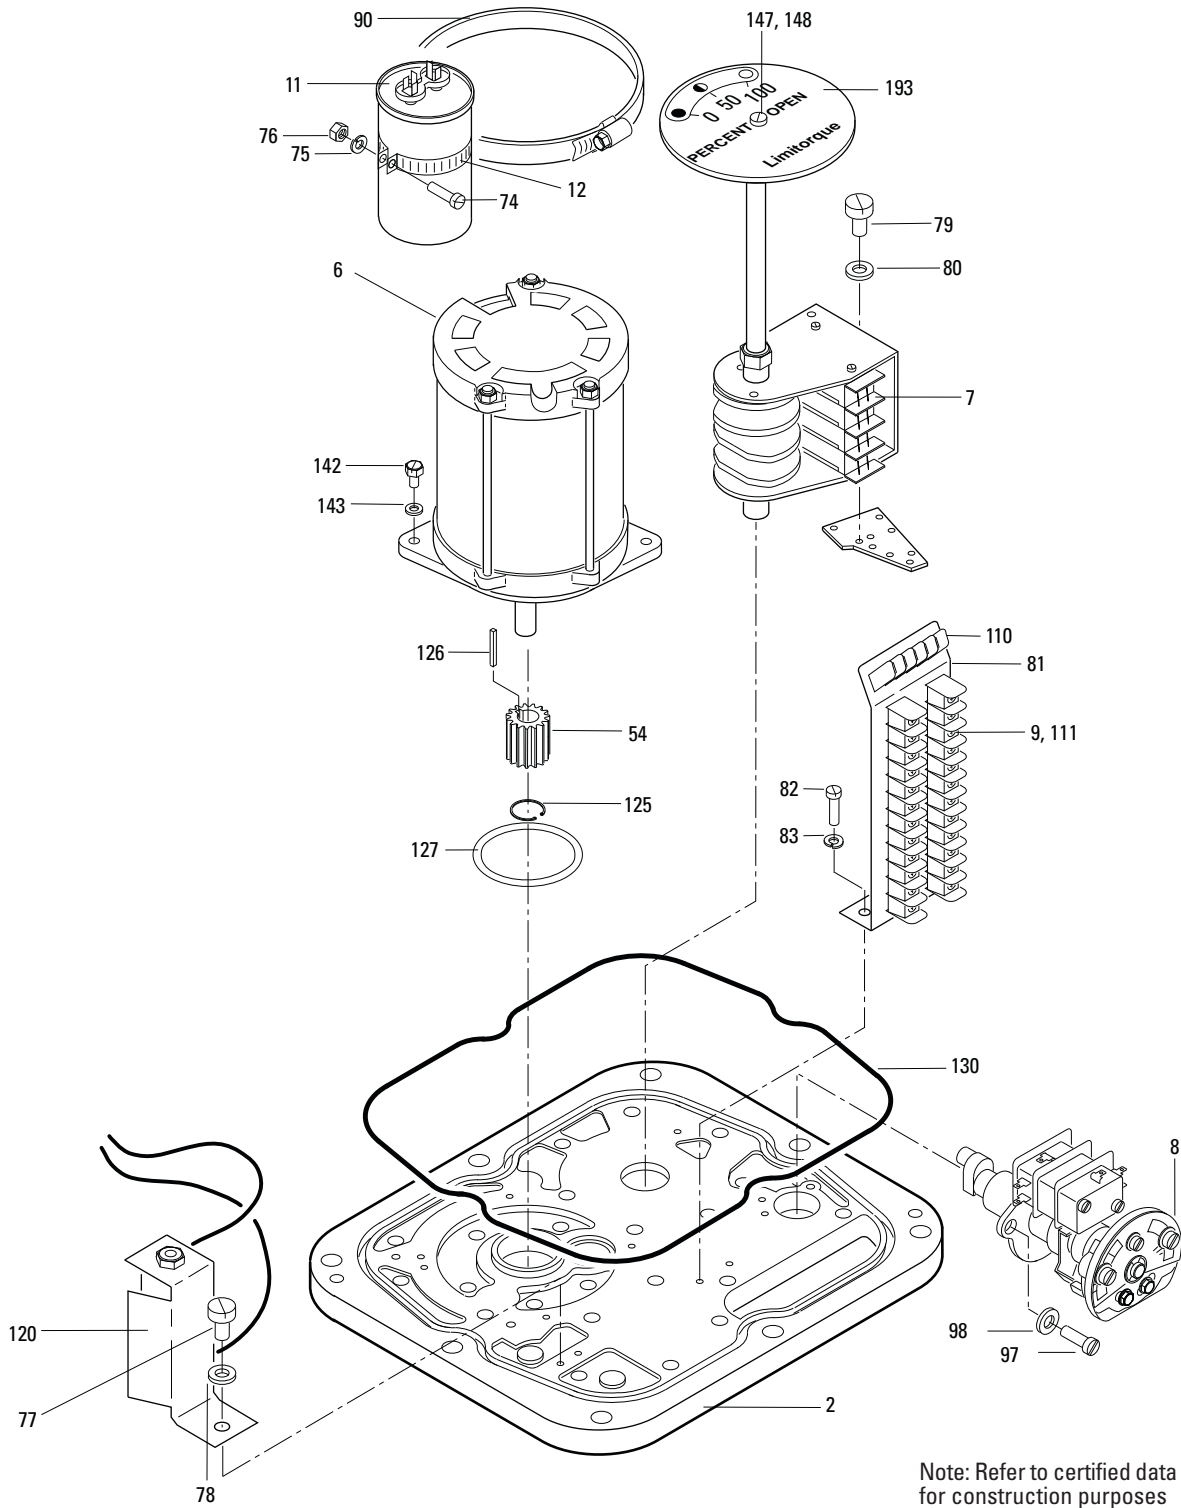


Figure 25 – LY 2001/3001 housing and associated parts


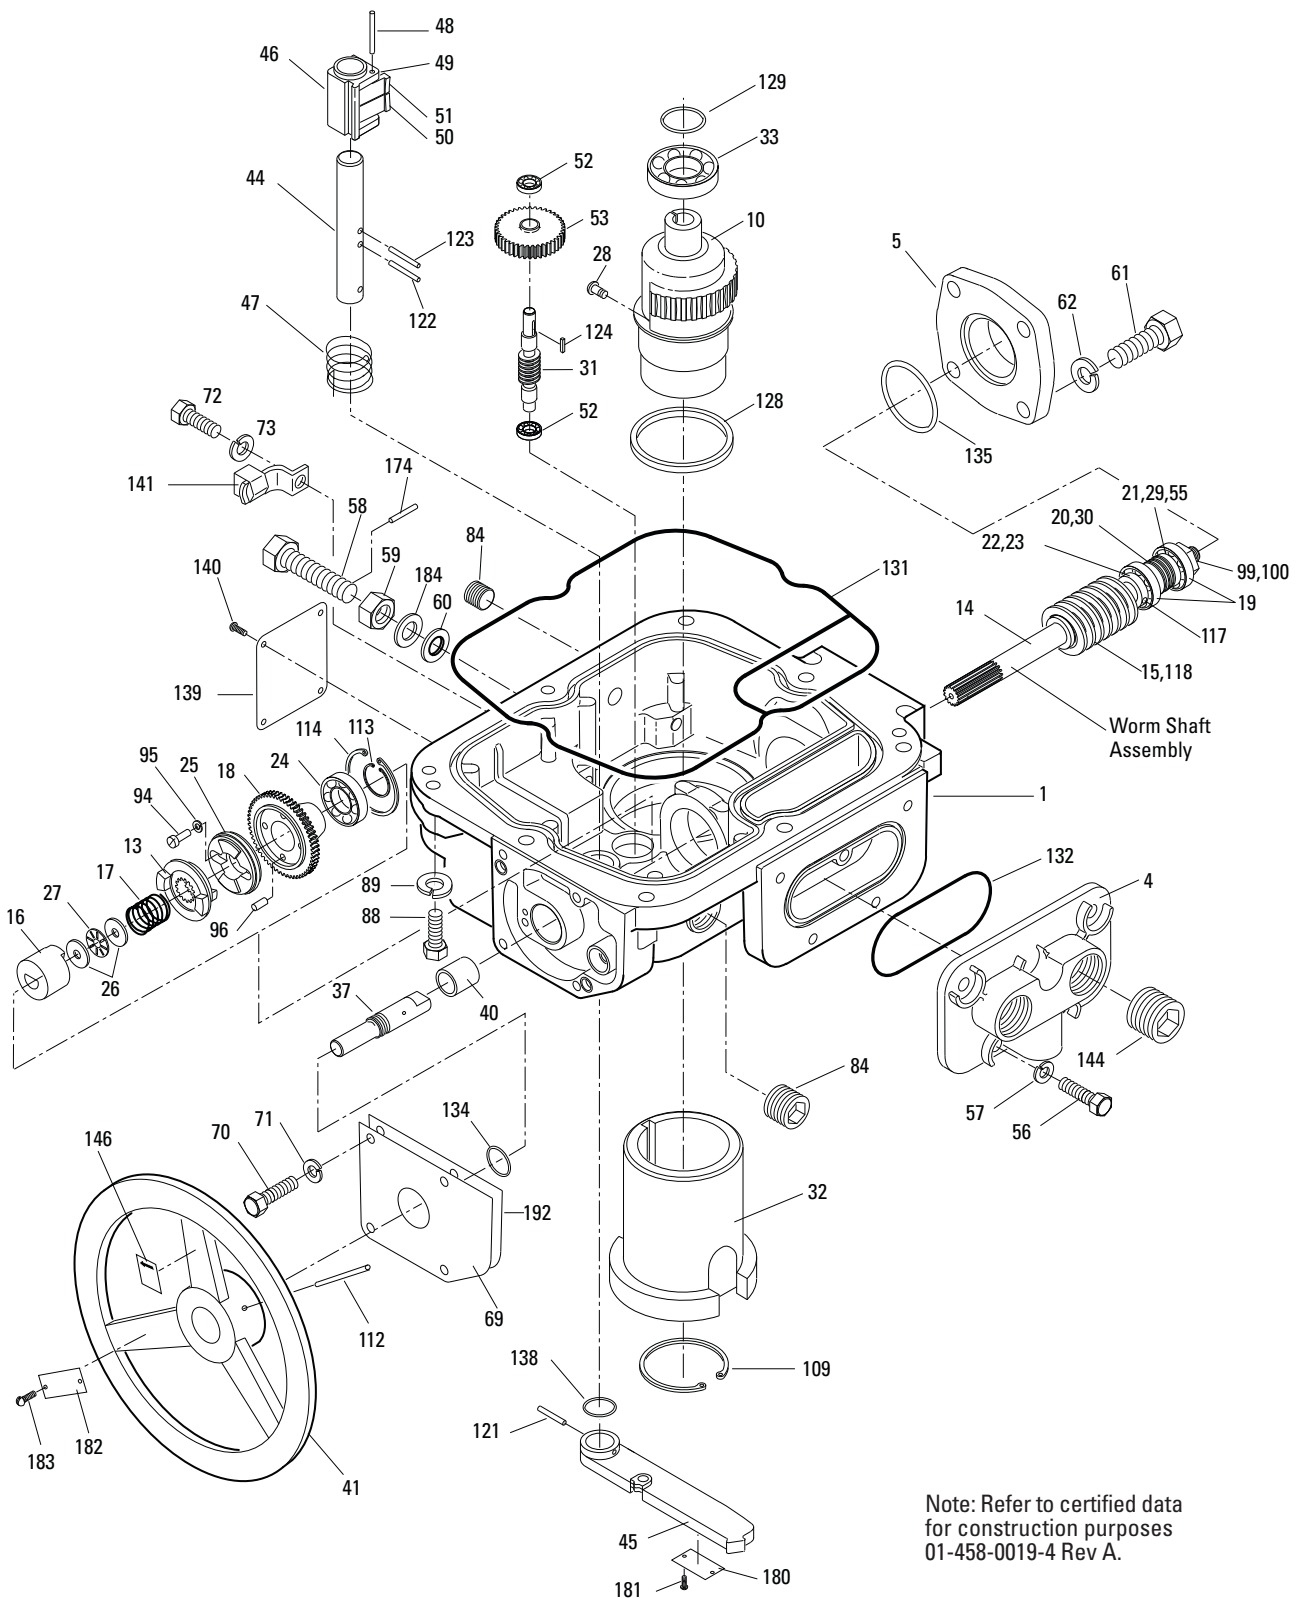


Figure 26 – LY 3001 handwheel assembly

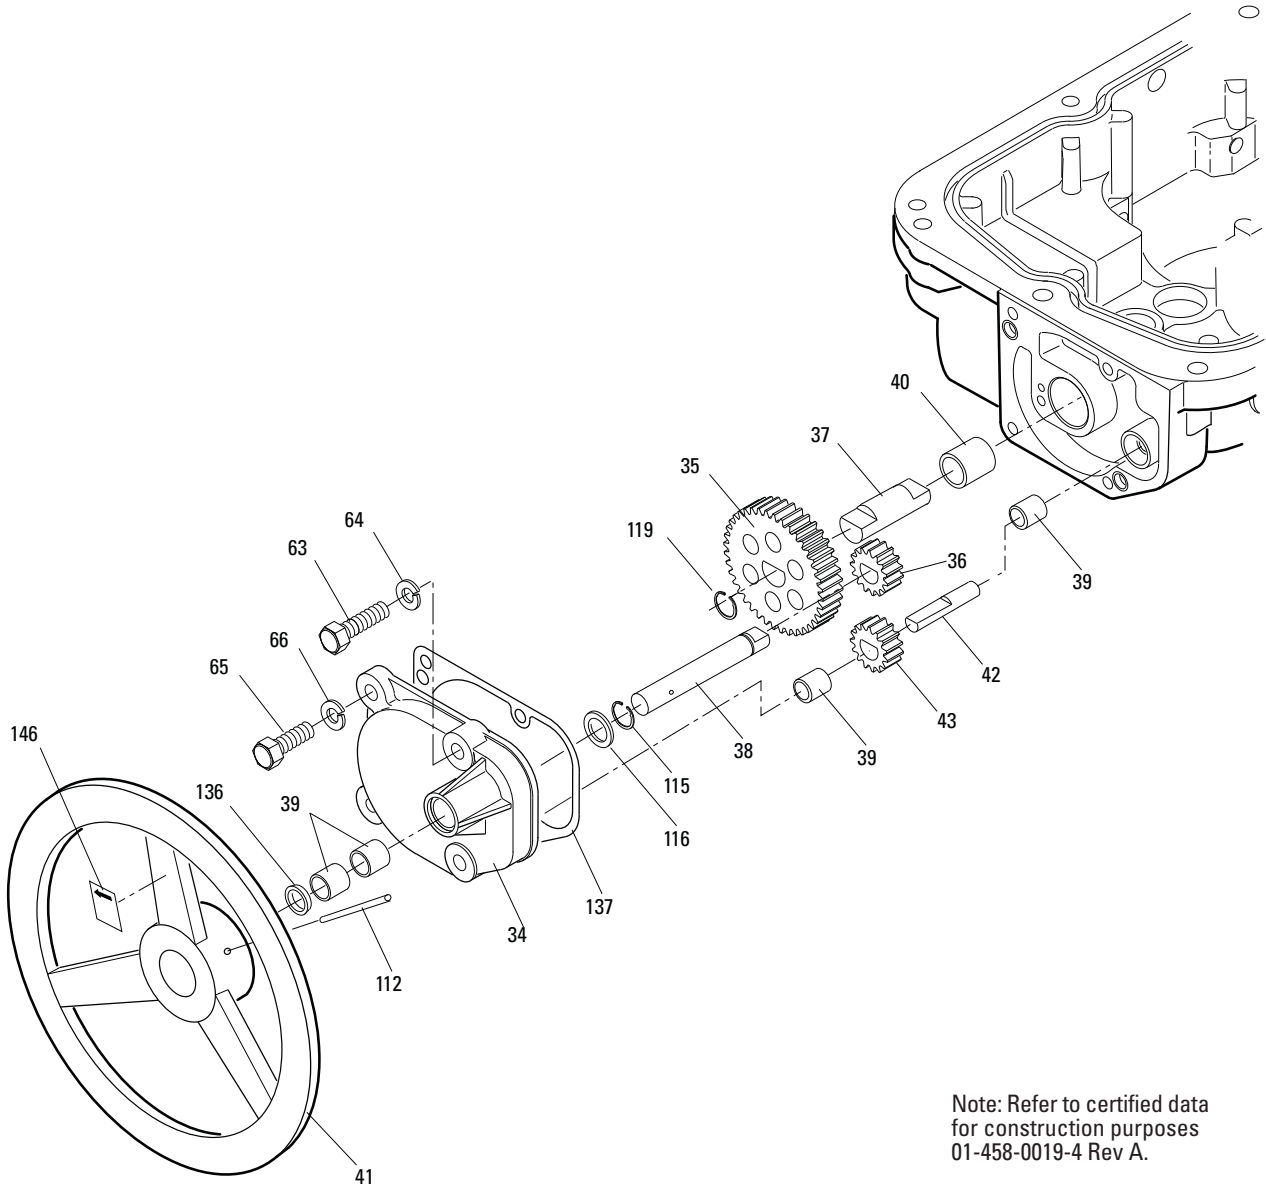

Note: Refer to certified data for construction purposes 01-458-0019-4 Rev A.

Maintenance

Lubrication

No seal can remain absolutely tight at all times. Therefore, it is not unusual to find a very small amount of weeping around shaft seals – especially during long periods of idleness such as storage. Using grease minimizes this condition as much as possible. If a small amount is weeping at start-up, remove it with a clean cloth. Once the equipment is operating on a regular basis, the weeping should stop.

Lubrication Inspection

Inspect Limatorque LY series actuators for correct lubrication prior to operating – particularly following a long storage period.

Each application has its own effect on the actuator and the frequency of these inspections should be based on the application and the operating experience. The following lubrication inspection schedule is recommended until operating experience indicates otherwise.

For Gear Case, inspect lubrication every 18 months or 500 cycles, whichever occurs first.

During an inspection, consider the following:

- Quantity – LY operators are built to operate on the immersion principle. Ensure there is enough lubricant so that the Worm is totally immersed in grease regardless of the position.
- Quality – Inspect lubricant for dirt, water or other foreign matter. If any one of these is found:
 1. Flush the actuator with a commercial degreaser/cleaner such as Exxon Varsol #18. This degreaser/cleaner is not corrosive and does not affect the seal materials.
 2. Repack the actuator with fresh lubricant allowing room for grease thermal expansion.
 - Consistency – Ensure the lubricant is fluid approximating a standard NLGI-0 grade consistency or less. Thinners such as Amoco WAYTAC #31 oil may be added provided the volume of thinner does not exceed 20% of the total lubricant.

Factory Lubricant

For Gear Case, the standard LY actuator is factory-lubricated with Exxon Nebula EP-0 calcium complex base grease, suitable for temperatures from -20°F to +175°F.

The standard Low & High operating temperature lubricant is Exxon Nebula EP-00 calcium complex grease, suitable for temperatures from -60°F to +250°F.

Minimum Lubricant Qualities Required

The standard lubricants used by Limatorque have been proven to be extremely reliable over the years of service. Limatorque does not recommend a particular lubricant substitute for the standard lubricants; however, Limatorque does require the following lubricant qualities as a minimum.

CAUTION: Do not mix lubricants of a different base chemical. Mixing lubricant bases may cause lubricant properties to be ineffective.

The lubricant must

- Contain an “EP” additive.
- Be suitable for the temperature range intended.
- Be water and heat resistant and non-separating.
- Not create more than 8% swell in Buna N or Viton.
- Not contain any grit, abrasive, or fillers.
- be slump-prefer NLGI-0 grade.
- Not be corrosive to steel gears, ball, or roller bearings.
- Have a dropping point above 316°F (158°C) for temperature ranges of -20°F (-9°C) to +150°F (+66°C).

Disassemble and Reassemble

CAUTION: Turn off all power services before attempting to perform service on the actuator.

Potential High Pressure Vessel. Before removing or disassembling your actuator, ensure that the valve or other actuated device is isolated and is not under pressure.

Disassemble Unit LY 1001

Unless otherwise noted, piece numbers refer to the Illustrated Parts Breakdown of Figures 20, 21, and 22.

▲ DANGER: HAZARDOUS VOLTAGE. Turn off all power before disassembling your LY actuator.

▲ DANGER: POTENTIAL HIGH-PRESSURE VESSEL. Before disassembling your actuator, ensure that the valve or other actuated device is isolated and is not under pressure.

Remove Cover and Top Plate

1. Shut off all power to the actuator.
2. Remove the **Control Cover** (piece #3).
3. Disconnect all electrical leads from the **Torque Switch** (piece #8) and **Limit Switch** (piece #7). Make sure that all wire leads are properly marked for reassembly.
4. Remove all external wires to the **Terminal Strips** (piece #9, #110).
5. If unit has an Integral Assembly, remove all wires from the Integral Assembly to the **Terminal Strip** (piece #9, #110).
6. Remove **Screws/Lockwashers** (piece #77, #78, #79 and #80) that are holding the **Limit Switch** (piece #7) and **Heater Assembly** (piece #120). Remove the Limit Switch and Heater Assembly.
7. Remove 2 **Screws** (piece #97) and 2 **Lockwashers** (piece #98) that are holding the **Torque Switch** (piece #8). Remove the Torque Switch.
8. Remove 2 **Screws** (piece #65) and 2 **Lockwashers** (piece #66) to remove the **Top Plate** (piece #2).
9. Lift **Top Plate** (piece #2) off the **LY Housing** (piece #1). The **Motor** (piece #6) can be left attached to the Top Plate when the Top Plate is removed.

Remove Input Worm Motor Pinion Assembly

10. Remove **Input Worm Motor Pinion Assembly** (piece # 52, 156, 53, 124 and 31).

Remove Worm Shaft Assembly

11. Remove 4 **Screws** (piece #61) and 4 **Lockwashers** (piece #62) to remove **Disc Spring Cap** (piece #5).
12. Remove **Disc Spring Cap** (piece #5) and **O-Ring** (piece #135).
13. Rotate Worm Shaft Assembly CCW. The Worm Shaft Assembly should travel out of the Housing. Once it has reached the end of travel, pull the remaining Worm Shaft Assembly out; **Clutch Sleeve** (piece #13) will slip off the Worm Shaft Assembly. In the event that the Worm is stripped, the Worm Shaft Assembly will need to be completely replaced.
NOTE: If Light Spring Pack or Heavy Spring Pack replacement is necessary, contact your Limatorque authorized dealer or the Limatorque Service Department for a complete Worm Shaft Assembly replacement.

Remove Handwheel Assembly

14. Remove the **Handwheel Clutch** (piece #16), **Compression Spring** (piece #154), **Clutch Sleeve** (piece #13), **Thrust Washer** (piece #26[2pcs]) and **Thrust Bearing** (piece #27).
15. Remove 2 **Screws** (piece #63) and 2 **Lockwashers** (piece #64) from the **Handwheel Cap** (piece #34).
16. Remove the **Handwheel Assembly** as one piece, (piece #41, 112, 34, 137, 134, 155[2pc]), 154, 70 and 37).

Remove Drive Sleeve

17. Remove **O-Ring** (piece #129) and **Bearing** (piece #33) from the top of the **Drive Sleeve** (piece #10).
18. Remove the **Drive Sleeve** (piece #10).

Remove Declutch Assembly

19. Remove **Roll Pin** (piece #121) and remove **Declutch Lever** (piece #45).
20. Push the **Declutch Assembly** (piece #46, 123, 44 and 55[2pcs]) up through the Housing and remove. Remove the **Declutch Return Spring** (piece #47).
21. Remove **O-Ring** (piece #138) from the Housing.

Remove Input Worm Gear

22. Remove the **Retaining Drive Ring** (piece #114).
23. Remove Input **Worm Gear** (piece #18) from the **Ball Bearing** (piece #24).

Reassemble Unit LY 1001

▲ DANGER: HAZARDOUS VOLTAGE. Turn off all power before reassembling your LY actuator.

All piece numbers refer to Figures 20, 21, and 22.


Install Input Worm Gear

1. Install Input **Worm Gear** (piece #18).
2. Install **External Retaining Drive Ring** (piece #114) on Input Worm Gear.

Install Declutch Assembly

3. Install **Declutch Return Spring** (piece #47) making sure one end of Spring is secured behind the Rib of the actuator housing and the other end is secured behind the bottom Declutch Fork of the Declutch Fork Assembly.

Figure 27 – LY 1001 Declutch Return Spring installation position

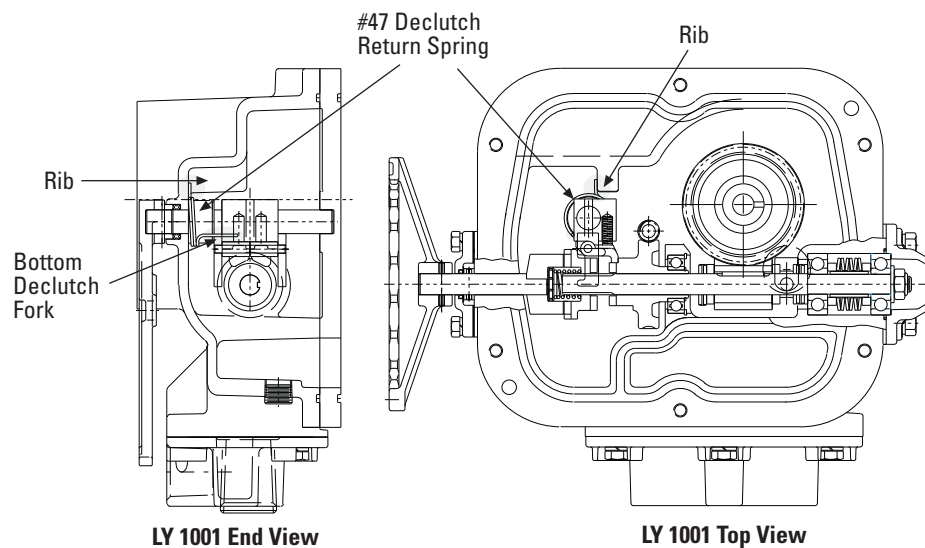

4. Install **Declutch Assembly** (piece #46, 123, 44 and 55).
5. Install **O-Ring** (piece #138) over **Declutch Shaft** (piece #44).
6. Install **Declutch Lever** (piece #45) and **Roll Pin** (piece #121).

Install Drive Sleeve

7. Install **Drive Sleeve** (piece #10).
8. Install **Ball Bearing** (piece #33) and **O-Ring** (piece #129) on the Drive Sleeve.

Install Worm Shaft Assembly

9. Install Worm Shaft Assembly.

NOTE: Push the Worm Shaft Assembly through to about 1/2" past the Input Worm Gear for installing the **Clutch Sleeve** (piece #13).

Install Handwheel Assembly

10. Install the **Clutch Sleeve** (piece #13) ensuring the **Declutch Fork Assembly** (piece #46) is between the **Input Worm Gear** (piece #18) and the **Clutch Sleeve** (piece #13).
11. Install **Thrust Washer** (piece #26), **Thrust Bearing** (piece #27) and second **Thrust Washer** (piece #26) into the **Handwheel Clutch** (piece #16).
12. Put a light coat of grease on the Thrust Bearing. Install **Spring** (piece #154) into the Handwheel Clutch.
13. Install **Handwheel Clutch Assembly** (piece #16, 154, 26[2pcs] and 27) into the Housing. Push remaining Worm Shaft Assembly into the Handwheel Clutch of the Handwheel Clutch Assembly.
14. Install **O-Ring** (piece #135) over the Worm Shaft Assembly Bearing.
15. Install **Disc Spring Cap** (piece #5) and **Hardware** (piece #61 and 62).
16. Install **Handwheel Cap Gasket** (piece #137) and **Handwheel Assembly** (piece #41, 112, 34, 137, 134, 155[2pcs], 154, 70 and 37).
17. Install **Hex Head Cap Screw** and **Lockwasher** (piece #63 and 64).

Install Input Worm Motor Pinion Assembly

18. Install **Input Worm Motor Pinion Assembly** (piece #52, 156, 53, 124 and 31) into the Housing.
19. Install **Housing Seal (O-Ring)** (piece #131).

Grease Unit

20. Grease unit with the properly recommended grease. (See **Section Lubrication**.)

Install Top Plate

21. Install **Top Plate** (piece #2) and **Hardware** (piece #65 and 66).
NOTE: If Top Plate will not fit properly, check **Ball Bearing** (piece #33) and **Declutch Shaft** (piece #44) for proper alignment into Top Plate molding.

Install Torque Switch Assembly, Motor Assembly, and Limit Assembly

22. Install **Torque Switch Assembly** (piece #8) with **Gasket** and **Hardware** (pieces #97 and 98).
23. Install **Limit Switch Assembly** (piece #7) and **Heater Assembly** (piece #120) with **Hardware** (piece #77, 78, 79 and 80).
24. Reconnect Limit Switch, Torque Switch and Terminal Strip. (See the wiring diagram included with the actuator for proper wiring configuration.)

Install Control Cover

NOTE: Before installing the Control Cover, reset the Limit Switches and Mechanical Stops. Recheck motor for proper rotation.

25. Install **Cover Seal O-Ring** (piece #130).
26. Install **Control Cover** (piece #3) with **Hardware** (piece #67 and 68).

Disassemble Unit LY 2001/3001

▲ DANGER: HAZARDOUS VOLTAGE. Turn off all power before disassembling your LY actuator.

▲ DANGER: POTENTIAL HIGH-PRESSURE VESSEL. Before disassembling your actuator, ensure that the valve or other actuated device is isolated and is not under pressure.

Piece numbers refer to Figures 23, 24, 25, and 26.

Remove Cover and Top Plate

1. Shut off all power to the actuator.
2. Remove the **Control Cover** (piece #3).
3. Disconnect all electrical leads from the **Torque Switch** (piece #8) and **Limit Switch** (piece #7). Make sure that all wire leads are properly marked for reassembly.
4. Remove all external wires to the **Terminal Strips** (piece #9, 110 and 111).
5. If unit has an Integral Assembly, remove all wires from the Integral Assembly to the **Terminal Strip** (piece #9, 110 and 111).
6. Remove **Screws/Lockwashers** (piece #79 and 80) that are holding the **Limit Switch** (piece #7). Remove the Limit Switch.
7. Remove 2 **Screws** (piece #97) and 2 **Lockwashers** (piece #98) that are holding the **Torque Switch** (piece #8). Remove the Torque Switch.
8. Remove 2 **Screws** (piece #88) and 2 **Lockwashers** (piece #89) to remove the **Top Plate** (piece #2).
9. Lift **Top Plate** (piece #2) of the **LY Housing** (piece #1). The **Motor** (piece #6) can be left attached to the Top Plate when the Top Plate is removed.

Remove Input Worm Motor Pinion Assembly

10. Remove **Input Worm Motor Pinion Assembly** (piece #52, 53, 124 and 31).

Remove Worm Shaft Assembly

11. Remove 4 **Screws** (piece #61) and 4 **Lockwashers** (piece #62) to remove **Bearing Cap** (piece #5).
12. Remove **Bearing Cap** (piece #5) and **O-Ring** (piece #135).
13. Rotate Worm Shaft Assembly CCW. The Worm Shaft Assembly should travel out of the Housing. Once it has reached the end of travel, pull the remaining Worm Shaft Assembly out; **Clutch Sleeve** (piece #13) will slip off the Worm Shaft Assembly. In the event that the Worm is stripped, the Worm Shaft Assembly will need to be completely replaced.
NOTE: If Light Spring Pack or Heavy Spring Pack replacement is necessary, contact your Limatorque authorized dealer or the Limatorque Service Department for a complete Worm Shaft Assembly replacement.

Remove Handwheel Assembly (LY 2001)

14. Remove the **Handwheel Clutch** (piece #16), **Compression Spring** (piece #17), **Clutch Sleeve** (piece #13), **Thrust Washer** (piece #26[2pcs]) and **Thrust Bearing** (piece #27).
15. Remove 4 **Screws** (piece #70) and 4 **Lockwashers** (piece #71) from the **Handwheel Cap Plate** (piece #69).
16. Remove the **Handwheel Assembly** as one piece, (piece #146, 41, 112, 69, 192, 134 and 37).
17. Go to Step No. 19.

Remove Handwheel Assembly (LY 3001)

14. Remove the **Handwheel Clutch** (piece #16), **Compression Spring** (piece #17), **Clutch Sleeve** (piece #13) and **Thrust Washer** (piece #26[2pcs]) and **Thrust Bearing** (piece #27).
15. Remove **Screws** (piece #63 and 65) and **Lockwashers** (piece #64 and 66) from the **Spur Gear Cover** (piece #34) of the Handwheel Assembly.
16. Remove the **Handwheel Assembly** as one piece, (piece #146, 41, 112, 136, 39[2pcs], 34, 137, 116, 115, 38 and 36).
17. Remove the **Handwheel Pinion and Idler** (piece #43) and **Idler Shaft** (piece #42).
18. Remove the **Handwheel Gear Assembly** (piece #119, 35 and 37).

Remove Drive Sleeve

19. Remove the **Roll Pins** (piece #174) located in the end of the **Mechanical Stop Screws** (piece #58).
20. Remove the **Mechanical Stop Screws** (piece #58), **Locking Nut** (piece #59), **Thread-Seal** (piece #60) and **Retaining Washer** (piece #184).
21. Remove **O-Ring** (piece #129) and **Bearing** (piece #33) from the top of the **Drive Sleeve** (piece #10).
22. Remove the **Drive Sleeve** (piece #10).

Remove Declutch Assembly

23. Remove **Roll Pin** (piece #121) and remove **Declutch Lever** (piece #45).
24. Push the **Declutch Assembly** (piece #46, 48, 123, 122 and 44) up through the Housing and remove. Then remove **Declutch Return Spring** (piece #47).
25. Remove **O-Ring** (piece #138) from the Housing.

Remove Input Worm Gear

26. Remove the **Retaining Drive Ring** (piece #113).
27. Remove **Input Worm Gear** (piece #18) and **Lug Adapter** (piece #25) as an assembly from the **Ball Bearing** (piece #24).

Reassemble Unit LY 2001/3001

▲ DANGER: HAZARDOUS VOLTAGE. Turn off all power before assembling the LY actuator.

Piece numbers refer to Figures 23, 24, 25, and 26.


Install Input Worm Gear

1. Install **Input Worm Gear** (piece #18).
2. Install **External Retaining Drive Ring** (piece #113) on Input Worm Gear.

Install Declutch Assembly

3. Install **Declutch Return Spring** (piece #47) making sure one end of Spring is secured in the Spring Seat Hole of the actuator housing and the other end is secured around the **Roll Pin** (piece #122) on the Declutch Fork Assembly.

Figure 28 - LY 2001/3001 Declutch Return Spring Installation Position

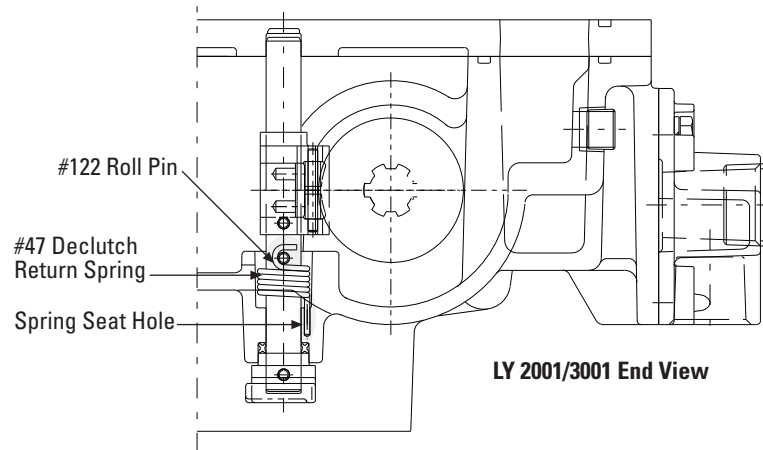

4. Install **Declutch Assembly** (piece #46, 48, 123, 122 and 44).
5. Install **O-Ring** (piece #138) over **Declutch Shaft** (piece #44).
6. Install **Declutch Lever** (piece #45) and **Roll Pin** (piece #121).

Install Drive Sleeve

7. Install **Drive Sleeve** (piece #10).
8. Install **Bearing** (piece #33) and **O-Ring** (piece #129) on the Drive Sleeve.
9. Install the **Mechanical Stop Screws** (piece #58), **Locking Nut** (piece #59), **Thread-Seal** (piece #60) and **Retaining Washer** (piece #184).
10. Install the **Roll Pins** (piece #174) located in the end of the **Mechanical Stop Screws** (piece #58).

Install Worm Shaft Assembly

11. Install Worm Shaft Assembly. Push the Worm Shaft Assembly through to about 1/2" past the Input Worm Gear. This allows installation of the **Clutch Sleeve** (piece #13).

Install Handwheel Assembly

12. Install the **Clutch Sleeve** (piece #13), ensuring the **Declutch Fork Assembly** (piece #46) is between the **Input Worm Gear** (piece #18) and the **Clutch Sleeve** (piece #13).
13. Install **Thrust Washer** (piece #26), **Thrust Bearing** (piece #27) and second **Thrust Washer** (piece #26) into the **Handwheel Clutch** (piece #16).
14. Put a light coat of grease on the Thrust Bearing. Install **Spring** (piece #17) into the Handwheel Clutch.
15. Install **Handwheel Clutch Assembly** (piece #16, 17, 26[2pcs] and 27) into the Housing. Push remaining Worm Shaft Assembly into the Handwheel Clutch of the Handwheel Clutch Assembly.
16. Install **O-Ring** (piece #135) over the Worm Shaft Assembly Bearing.
17. Install **Bearing Cap** (piece #5) and **Hardware** (piece #61 and 62).

LY 2001 Handwheel Assembly

18. Install **Handwheel Assembly** (piece #146, 41, 112, 69, 192, 134, and 37).
19. Install **Hardware** (piece #70 and 71).
20. Go to Step No. 22.

LY 3001 Handwheel Assembly

18. Install the **Handwheel Gear Assembly** (piece #119, 35 and 37).
19. Install the **Handwheel Pinion and Idler** (piece #43) and **Idler Shaft** (piece #42).
20. Install the **Handwheel Assembly** (piece #146, 41, 112, 136, 39, 34, 137, 116, 115, 38 and 36).
21. Install **Screws** (piece #63 and 65) and **Lockwashers** (#64 and 66) to secure the Handwheel Assembly onto the housing.

Install Input Worm Motor Pinion Assembly

22. Install **Input Worm Motor Pinion Assembly** (piece #52, 53, 124 and 31) into the Housing.
23. Install **Housing Seal (O-Ring)** (piece #131).

Grease Unit

24. Grease unit with the properly recommended grease. (See **Section Lubrication.**)

Install Top Plate

25. Install **Top Plate** (piece #2) and **Hardware** (piece #88 and 89).
NOTE: If Top Plate will not fit properly, check **Bearing** (piece #33) and **Declutch Shaft** (piece #44) for proper alignment into Top Plate molding.

Install Torque Switch Assembly, Motor Assembly and Limit Assembly

26. Install **Torque Switch Assembly with Gasket** (piece #8) and **Hardware** (piece #97 and 98).
27. Install **Limit Switch** (piece #7) with **Hardware** (piece #79 and 80).
28. Re-connect Limit Switch, Torque Switch and Terminal Strip. Refer to the actuator wiring diagram for proper wiring configuration.

Install Control Cover

NOTE: Before installing the Control Cover, reset the Limit Switches and Mechanical Stops. Re-check motor for proper rotation.

29. Install **Cover O-Ring** (piece #130).
30. Install **Control Cover** (piece #3) with **Hardware** (piece #67 and 68).

Troubleshooting

▲ WARNING: Be aware of electrical hazards within the actuator and high-pressure hazards of the attached valve or other actuated device when installing or performing maintenance on the LY actuator.

Symptom	Possible Cause	Corrective Action
Unit will not operate electrically	No power to unit	a. Verify power supply is electrically correct and present at actuator. b. Verify power leads are connected in accordance with the applicable wiring diagram. c. Inspect for blown fuse, tripped circuit breaker or overload or open disconnect switch.
	Loose or incorrect wiring	Check wiring for proper wiring connection in accordance with the applicable wiring diagram. Check also for tight connections.
	Limit Switches not set or incorrectly set	Check Limit Switch development for agreement with the applicable wiring diagram. If not set properly, follow instructions in Section Limit Switch and Mechanical Stop Settings .
	Foreign material on switch contacts preventing good electrical contact.	Check continuity of micro-switch with an ohmmeter.
Motor runs, but no output from unit	Actuator not coupled properly to output.	Inspect Torque Nut and Valve Shaft to verify key is in place and properly staked.
	Worm gear worn out	Remove Worm Shaft Assembly in accordance with Section Disassemble Unit LY 1001 or Section Reassemble Unit LY 2001/3001 as applicable. Inspect worm gear for unusual wear. If excessive wear has occurred, replace the Worm Shaft Assembly.
	Torque Nut disengaged from Drive Sleeve	Verify Torque Nut properly installed in accordance with Section Installation Overview Step No. 1.

(continued)

Symptom	Possible Cause	Corrective Action
Motor runs, but no output from unit	Damaged gearing	Disassemble actuator in accordance with Section Disassemble Unit LY 1001 or Section Reassemble Unit LY 2001/3001 as applicable. Inspect gearing for rough or damaged spots. Replace as required. Most often, damaged spots are seen in motor gear set.
Unit operation is noisy	Inadequate lubrication (poor quality or not enough)	Inspect quality and quantity of lubrication in accordance with Section Lubrication .
	Gearing mis-aligned	Inspect gearing for uneven wear pattern and replace gearing as needed. Most wear is seen in the motor gear set.
	Worn or damaged bearings	Disassemble unit and replace worn bearings, seals and lubricant.
Fuse blown	Incorrect fuse size	Verify fuses are sized correctly.
	Pinched wire	Inspect control compartment to ensure Control Cover is not pinching or making contact with wiring when installed.
	Power surges	Investigate control circuit for surges.
Premature Torque Switch trip	Torque Switch setting too low	Increase Torque Switch setting as required, up to but not exceeding maximum setting established by the Torque Switch Limiter Plate.
	Valve packing too tight	Inspect valve packing for excessive tightness. Repair valve by replacing packing as required. Refer to your valve manufacturer for specific instructions.
	Unit is not properly aligned with valve.	Take bolts off between the unit and the valve. Check for proper unit alignment.
	Valve needs lubrication.	Check valve lubrication using grease fitting on bottom of valve.
Torque Switch fails to stop actuator	Output rotation not in agreement with unit wiring	Consult Limitorque to verify design rotation. If actual rotation is opposite to design rotation, the Torque Switch needs to have contact wiring reversed.
	Under voltage going to unit	Check incoming voltage supply.
Reversing Starter failure	Starter undersized	Verify starter is sized correctly for application. Consult factory to evaluate.
(continued)		

Symptom	Possible Cause	Corrective Action
Reversing Starter failure	Excessive cycling (too frequent operation)	Review application to determine number of starts per hour and review with factory if more than 100 per hour.
Excessive current draw	Valve running loads higher than expected	Inspect valve for possible causes of high running load. In particular, check for excessive tightness of valve packing and for proper lubrication of valve. Consult Limitorque for review of application.
Motor overload tripping	Excessive current draw	Inspect valve for possible causes of high running load. In particular, check for excessive tightness of valve packing and for proper lubrication of valve. Consult Limitorque for review of application.
	Incorrect overloads	Verify proper overloads selected for motor rating.
Excessive gear wear	Excessive loads	Verify actual loads are in accordance with both start and run capabilities of your actuator.
	Inadequate lubrication	Inspect quality and quantity of lubrication in accordance with Section Lubrication.
	Improper alignment	Inspect worn gears for evidence of uneven wear pattern.
Excessive torque required to turn handwheel	Valve running loads higher than expected	Inspect valve for possible cause of high running loads. In particular, check for excessive tightness of valve packing, proper lubrication of valve stem, bent or damaged valve, tight Stem/Torque Nut fit, worm or damaged stem nut.
	Unit is not properly aligned with valve.	Take bolts off between the unit and the valve and check for proper unit alignment.
Oil leaking from unit	Infrequent operation of actuator resulting in grease separation.	Institute periodic operation of unit into a maintenance program to keep grease mixed. If not possible, schedule more frequent lubrication to ensure adequate lubrication of gearbox.
	Damaged or worn seals	Replace seals.
Valve is closed, but flow is not cut off	Valve mechanical stops not set correctly	a. Do not set Torque Switch higher than maximum setting defined by Torque Limiter Plate. Inspect valve seat and repair as required. b. Check setting of Closed Mechanical Stop.
CAUTION: Most 1/4 turn valves are position-seated, not torque-seated. Applying additional torque to the handwheel and/or repeated electrical bumping at the full closed position may damage the valve and/or the actuator.		

Parts

Parts List

LY 1001 Parts List

Piece #	Description	Qty	Piece #	Description	Qty
1	LY 1001 Housing	1	56	Hex Head Cap Screw	4
2	Top Plate	1	57	Lockwasher	4
3	Control Cover	1	58	Mech. Stop (Set Screw)	2
4	Conduit Adapter	1	59	Set Screw	2
5	Disc Spring Cap	1	61	Hex Head Cap Screw	4
6	Motor	1	62	Lockwasher	4
7	Limit Switch Assy	4	63	Hex Head Cap Screw	2
8	Torque Switch Assy	1	64	Lockwasher	2
9	Terminal Strip	2	65	Hex Head Cap Screw	2
10	Drive Sleeve	1	66	Lockwasher	2
11	Capacitor	Varies	67	Hex Head Cap Screw	6
13	Clutch Sleeve	1	68	Lockwasher	6
14	Worm Shaft*	1	70	Roll Pin	1
15	Worm*	1	72	Hex Head Cap Screw	1
16	Handwheel Clutch	1	73	Lockwasher	1
18	Input Worm Gear	1	77	Fillister HD Machine Screw	2
19	Ball Bearing*	2	80	Lockwasher	2
20	Disc Spring*	6	81	Terminal Bracket	1
21	Sprint Spacer*	2	82	Fillister HD Machine Screw	2
22	Torque Switch Spacer*	1	83	Lockwasher Int Tooth	2
23	Worm Spacer*	2	84	Pipe Plug	1
24	Ball Bearing	1	85	Pipe Plug	1
26	Thrust Washer	2	86	Hex Head Screw	4
27	Thrust Bearing	1	94	Roll Pin*	1
30	Spring Sleeve*	1	96	Groove Pin*	1
31	Input Worm Shaft	1	97	Fillister HD Machine Screw	2
32	Torque Nut	1	98	Lockwasher Int Tooth	2
33	Ball Bearing	1	99	Flat Washer*	1
34	Handwheel Cap	1	100	Flexloc Nut*	1
37	Handwheel Input Shaft	1	106	Dial Window	1
40	Bearing Stop*	1	107	Dial Window Gasket	1
41	Handwheel	1	108	Dial Window Rtn Plate	1
44	Declutch Shaft	1	110	Terminal Strip	1
45	Declutch Lever	1	111	Press-on Retaining Clip	15
46	Declutch Fork Assembly	1	112	Roll Pin	1
47	Declutch Return Spring	1	113	Retaining Drive Ring	1
50	Declutch Latch – Right	1	114	Retaining Drive Ring	1
51	Declutch Latch – Left	1	118	Key*	1
52	Ball Bearing	2	120	Heater Bracket Assy	1
53	Pinion Gear	1	121	Roll Pin	1
54	Motor Pinion Gear	1	123	Roll Pin	1
55	Retaining Washer	2	124	Roll Pin	1

* Worm Shaft Assembly Component

LY 1001 Parts List (continued)

Piece #	Description	Qty	Piece #	Description	Qty
126	Roll Pin	1	147	Fillister HD Machine Screw	1
127	O-Ring	1	148	Lockwasher Int Tooth	1
128	Quad Ring	1	153	Spring Spacer*	1
129	O-Ring (3mm)	1	154	Compression Spring	2
130	Cover Seal	1	155	Handwheel Washer	2
131	Housing Seal	1	156	Spacer	1
132	O-Ring	1	157	Washer	1
134	Quad Ring	1	165	Retaining Drive Ring	1
135	O-Ring	1	169	Capacitor Bracket	1
137	Handwheel Cap Gasket	1	170	Fillister HD Machine Screw	1
138	O-Ring	1	171	Lockwasher Int Tooth	1
139	Unit Nameplate	1	180	Declutch Lever Plate	1
140	Drive Screw	4	181	Drive Screws	2
141	Grounding Lug	1	182	Cheater Bar Warn Lbl	1
142	Hex Head Cap Screw	2	183	Drive Screws	2
143	Lockwasher	2	184	Retaining Drive Rings	2
144	Pipe Plug	2	185	Key	1
145	O-Ring	1	186	Warning Label	1
146	Dial	1			

LY 2001/3001 Parts List

Piece #	Description	Qty	Piece #	Description	Qty
1	Housing	1	24	Ball Bearing	1
2	Top Plate	1	25	Lug Adapter	1
3	Control Cover	1	26	Thrust Washer	2
4	Conduit Adapter	1	27	Thrust Bearing	2
5	Bearing Cap	1	28	Stop Pin	2
6	Motor	1	29	Spring Pack Shim*	1
7	Limit Switch Assy	1	30	Limit Sleeve*	1
8	Torque Switch Assy	1	31	Input Worm Shaft	1
9	Terminal Strip	2	32	Torque Nut	1
10	Drive Sleeve and Gear	1	33	Ball Bearing	1
11	Capacitor	Varies	34	Spur Gear Cover	1
12	Capacitor Bracket	1	35	Handwheel Gear	1
13	Clutch Sleeve	1	36	Handwheel Pinion & Idler	1
14	Worm Shaft*	1	37	Handwheel Input Shaft	1
15	Worm*	1	38	Handwheel Input Shaft	1
16	Handwheel Clutch (Lug Adapter)	1	39	Bushing	3
17	Compression Spring	1	40	Bushing	1
18	Input Worm Gear	1	41	Handwheel	1
19	Ball Bearing*	2	42	Idler Shaft	1
20	Disc Spring*	6	43	Handwheel Pinion & Idler	1
21	Spring Washer*	1	44	Declutch Shaft	1
22	Bearing Spacer*	1	45	Declutch Lever	1
23	Worm Spacer*	1	46	Declutch Fork Assy	1

* Worm Shaft Assembly Component

LY 2001/3001 Parts List (continued)

Piece #	Description	Qty	Piece #	Description	Qty
47	Declutch Lever Return Spring	1	90	Worm Drive Clamp	Varies
48	Dowel Pin	1	94	Socket Head Cap Screw	2
49	Compression Spring	2	95	Lockwasher	2
50	Declutch Latch – Right	1	96	Dowel Pin	2
51	Declutch Latch – Left	1	97	Fillister HD Machine Screw	2
52	Ball Bearing	2	98	Lockwasher Int Tooth	2
53	Worm Shaft Gear	1	99	Bearing Locknut*	1
54	Motor Pinion Gear	1	100	Stop Window	1
55	Spring Sleeve*	2	106	Dial Window	1
56	Hex Head Cap Screw	4	107	Dial Window Gasket	1
57	Lockwasher	4	108	Dial Window Rtg Plate	1
58	Full Threaded Hex Head Cap Screw	2	109	Retaining Drive Ring Int	1
59	Locking Nut (Jam Nut)	2	110	Terminal Strip	1
60	Thread-Seal	2	111	Press-on Retaining Clip	15
61	Hex Head Cap Screw	4	112	Roll Pin	1
62	Lockwasher	4	113	Retaining Drive Ring	1
63	Hex Head Cap Screw	2	114	Retaining Drive Ring	1
64	Lockwasher	2	115	Retaining Drive Ring	1
65	Hex Head Cap Screw	2	116	Retainer Washer	1
66	Lockwasher	2	117	Roll Pin (Spring)*	1
67	Hex Head Cap Screw	8	118	Key*	1
68	Lockwasher	8	119	Retaining Drive Ring	1
69	Handwheel Cap Plate	1	120	Heater Bracket Assy	1
70	Fillister HD Machine Screw	1	121	Roll Pin	1
71	Lockwasher	1	122	Roll Pin	1
72	Hex Head Cap Screw	1	123	Roll Pin	1
73	Lockwasher	1	124	Key	1
74	Fillister HD Machine Screw	Varies	125	Retaining Pin	1
75	Lockwasher	Varies	126	Key	1
76	Hex Nut	Varies	127	O-Ring	1
77	Fillister HD Machine Screw	Varies	128	Quad Ring	1
78	Lockwasher Int Tooth	1	129	O-Ring	1
79	Fillister HD Machine Screw	2	130	CVR Seal	1
80	Lockwasher Int Tooth	2	131	Housing Seal	1
81	Terminal Bracket	1	132	O-Ring	1
82	Fillister HD Machine Screw	2	134	O-Ring	1
83	Lockwasher Int Tooth	2	135	O-Ring	1
84	Pipe Plug	2	136	Lip Seal	1
86	Hex Head Cap Screw	4	137	Gear Cover Gasket	1
88	Hex Head Cap Screw	2	138	O-Ring Kit	1
89	Lockwasher	2	139	Unit Nameplate	1

* Worm Shaft Assembly Component

LY 2001/3001 Parts List (continued)

Piece #	Description	Qty	Piece #	Description	Qty
140	Drive Sleeve	4	174	Roll Pin	2
141	Grounding Lug	1	180	Declutch Lever Plate	1
142	Hex Head Cap Screw	2	181	Drive Screw	2
143	Lockwasher	2	182	Cheater Bar Warn Lbl	1
144	Pipe Plug	2	183	Drive Screw	2
145	O-Ring	1	184	Retaining Washer	1
146	Handwheel Label	1	186	Warning Label	1
147	Fillister HD Machine Screw	1	192	Gear Cover Basket	1
148	Lockwasher Int Tooth	1	193	Dial	1
157	Spacer	4			

* Worm Shaft Assembly Component

How to Order Parts

To order parts or obtain further information for your Limitorque LY valve actuators, contact your local Limitorque distributor sales office, or:

Limitorque Corporation
5114 Woodall Road
P.O. Box 11318
Lynchburg, VA 24506-1318
Attn: Parts Department

Telephone (804) 528-4400
FAX (804) 845-9736

All inquiries or orders must be accompanied by the following information:

1. Unit Size
2. Limitorque Corporation Order Number

Limitorque

Australian Distributor for Limitorque

Acrodyne Pty Ltd
14/11 Havelock Road
Bayswater, Victoria 3153
Australia
Phone 03-8727-7800
Fax 03-9729-8699

Information in this publication is believed to be accurate. Limitorque reserves the right to modify published information to reflect product improvements or changes. Please contact Limitorque if certified data is required. Products sold and licensed by Limitorque are covered by the warranty appearing in its standard terms and conditions of sale.

Limitorque is a registered trademark of Limitorque Corporation, a BTR company. The latest revisions to this document are available online from Limitorque's website.

150-12000 Rev A/www A 12/98
© Copyright 1998, Printed in U.S.A.



Limitorque Corporation
5114 Woodall Road
P.O. Box 11318
Lynchburg, VA 24506-1318
<http://www.limitorque.com>